

## Industrial controller KS 50-1 and KS 52-1








# BlueControl

More efficiency in engineering,  
more overview in operating:  
The projecting environment for the BluePort controllers



**ATTENTION!**  
Software and Updates on  
[www.pma-online.de](http://www.pma-online.de)  
or on PMA-CD

## Description of symbols:

-  General information
-  General warning
-  Attention: ESD sensitive devices

© PMA Prozeß- und Maschinen-Automation GmbH Printed in Germany  
All rights reserved. No part of this document may be reproduced or published in any form  
or by any means without prior written permission from the copyright owner.

A publication of PMA Prozeß- und Maschinen Automation  
P.O.Box 310229  
D-34058 Kassel  
Germany


# Contents

---

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Mounting</b> . . . . .   | <b>5</b>  |
| <b>2</b> | <b>Electrical connections</b> . . . . .                                     | <b>7</b>  |
| 2.1      | Connecting diagram . . . . .  | 7         |
| 2.2      | Connecting diagram for the options card . . . . .                           | 8         |
| 2.3      | Terminal connection . . . . .   | 8         |
| <b>3</b> | <b>Operation</b> . . . . .  | <b>12</b> |
| 3.1      | Front view . . . . .  | 12        |
| 3.2      | Behaviour after power-on . . . . .  | 13        |
| 3.3      | Operating level . . . . .   | 13        |
| 3.4      | Maintenance manager / Error list . . . . .                                  | 14        |
| 3.5      | Self-tuning . . . . .   | 16        |
| 3.5.1    | Preparation before self-tuning . . . . .                                    | 16        |
| 3.5.2    | Self-tuning start . . . . .   | 17        |
| 3.5.3    | Self-tuning cancellation . . . . .  | 17        |
| 3.5.4    | Acknowledgement of failed self-tuning . . . . .                             | 17        |
| 3.5.5    | Optimization after start-up or at the set-point . . . . .                   | 17        |
| 3.5.6    | Selecting the method ( <b>CONF</b> / <b>ENTER</b> / <b>TUNE</b> ) . . . . . | 18        |
| 3.5.7    | Optimization at the set-point for 3-point stepping controller . . . . .     | 21        |
| 3.5.8    | <b>Examples for self-tuning attempts</b> . . . . .                          | <b>22</b> |
| 3.6      | Manual tuning . . . . .   | 23        |
| 3.7      | Second PID parameter set . . . . .  | 24        |
| 3.8      | Alarm handling . . . . .  | 25        |
| 3.9      | Operating structure . . . . .   | 27        |
| <b>4</b> | <b>Configuration level</b> . . . . .  | <b>28</b> |
| 4.1      | Configuration survey . . . . .  | 28        |
| 4.2      | Configurations . . . . .  | 29        |
| 4.3      | Set-point processing . . . . .  | 38        |
| 4.3.1    | Set-point gradient / ramp . . . . .   | 38        |
| 4.4      | KS50-1 cooling functions . . . . .  | 38        |
| 4.4.1    | Standard ( <b>YCL = 0</b> ) . . . . .                                       | 38        |

|            |   |           |
|------------|---|-----------|
| 4.4.2      | <b>Switching attitude linear ( CYCL = 1 )</b> . . . . .             | 39        |
| 4.4.3      | <b>Switching attitude non-linear ( CYCL = 2 )</b> . . . . .         | 39        |
| 4.4.4      | Heating and cooling with constant period ( CYCL = 3 ) . . . . .     | 40        |
| <b>4.5</b> | <b>Configuration examples</b> . . . . .                             | <b>41</b> |
| 4.5.1      | On-Off controller / Signaller (inverse) . . . . .                   | 41        |
| 4.5.2      | 2-point and continuous controller (inverse) . . . . .               | 42        |
| 4.5.3      | 3-point and continuous controller . . . . .                         | 43        |
| 4.5.4      | 3-point stepping controller (relay & relay) . . . . .               | 44        |
| 4.5.5      | Z Y - Off controller / 2-point controller with pre-contact. . . . . | 45        |
| 4.5.6      | KS50-1 with measured value output . . . . .                         | 46        |
| <b>5</b>   | <b>Parameter setting level.</b> . . . . .                           | <b>48</b> |
| 5.1        | Parameter survey . . . . .  | 48        |
| 5.2        | Parameters . . . . .  | 49        |
| 5.3        | Input scaling . . . . .   | 52        |
| 5.3.1      | Input I nP.1 . . . . .  | 52        |
| 5.3.2      | Input I nP.2 . . . . .  | 52        |
| <b>6</b>   | <b>Calibration level</b> . . . . .                                  | <b>53</b> |
| <b>7</b>   | <b>Programmer</b> . . . . .   | <b>56</b> |
| <b>8</b>   | <b>Special functions</b> . . . . .                                  | <b>57</b> |
| 8.1        | Start-up circuit. . . . .   | 57        |
| 8.2        | Boost function . . . . .  | 58        |
| 8.3        | KS50/52-1 as Modbus master . . . . .                                | 59        |
| 8.4        | Linearization. . . . .  | 60        |
| <b>9</b>   | <b>BlueControl.</b> . . . . .                                       | <b>61</b> |
| <b>10</b>  | <b>Versions.</b> . . . . .  | <b>62</b> |
| <b>11</b>  | <b>Technical data</b> . . . . .                                     | <b>64</b> |
| <b>12</b>  | <b>Safety hints</b> . . . . .                                       | <b>67</b> |
| 12.1       | Reset to default . . . . .  | 69        |

**1** Mounting

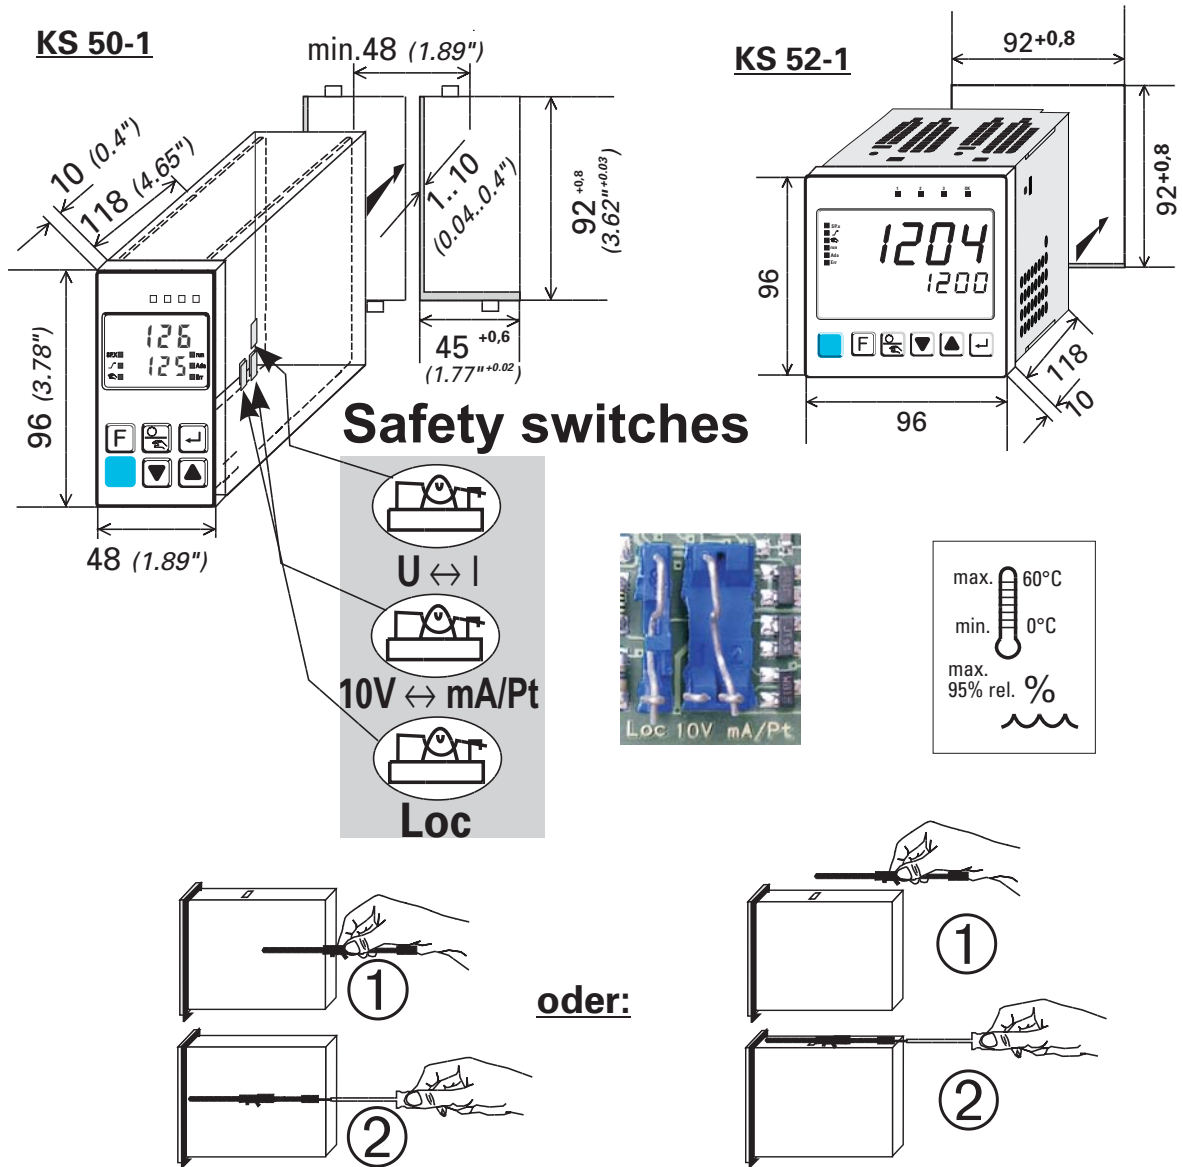

**Safety switch:**

For access to the safety switches, the controller must be withdrawn from the housing. Squeeze the top and bottom of the front bezel between thumb and forefinger and pull the controller firmly from the housing.

| Name of safety switch   | Position  | Remark  | Factory setting |
|---|-----------|---|-----------------|
| 10V ↔ mA/Pt   | right     | Current signal / Pt100 / thermocouple at <i>1 n P. 1</i>  | ●               |
|   | left      | Voltage signal at <i>1 n P. 1</i>   |                 |
| Loc   | open      | Levels as set using the BlueControl® eng. tool (default):<br>- Access to controller off / self-tuning / extended operating level = enabled<br>- Password <i>P A S S = O F F</i><br>- Access to parameter setting level / configuration level / calibration level = disabled |                 |
|   | close     | all levels accessible without restriction   | ●               |
| U ↔ I<br>only valid for<br>KS5.-1.4-.....-...<br>KS5.-1.5-.....-... | right (I) | Current / logic on output 3 "OUT3"  | ●               |
|   | left (U)  | Voltage on output 3 "OUT3"  |                 |



**Safety switch 10V ↔ mA/Pt and U ↔ I always in position left or right. Leaving the safety switch open may lead to faulty functions!**




**Caution!** The unit contains ESD-sensitive components.


**2 Electrical connections**

**2.1 Connecting diagram**

Electrical connections for all types KS 5x-1 except KS 5\_-1\_4-\_00\_-\_-\_-

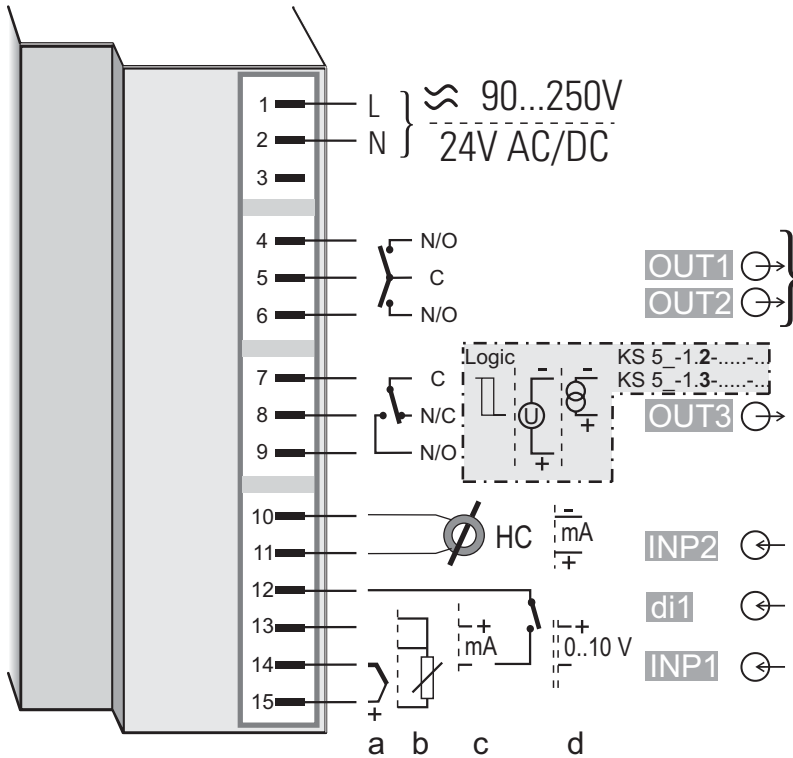


Electrical connections for KS 5\_-1\_4-\_00\_-\_-\_-

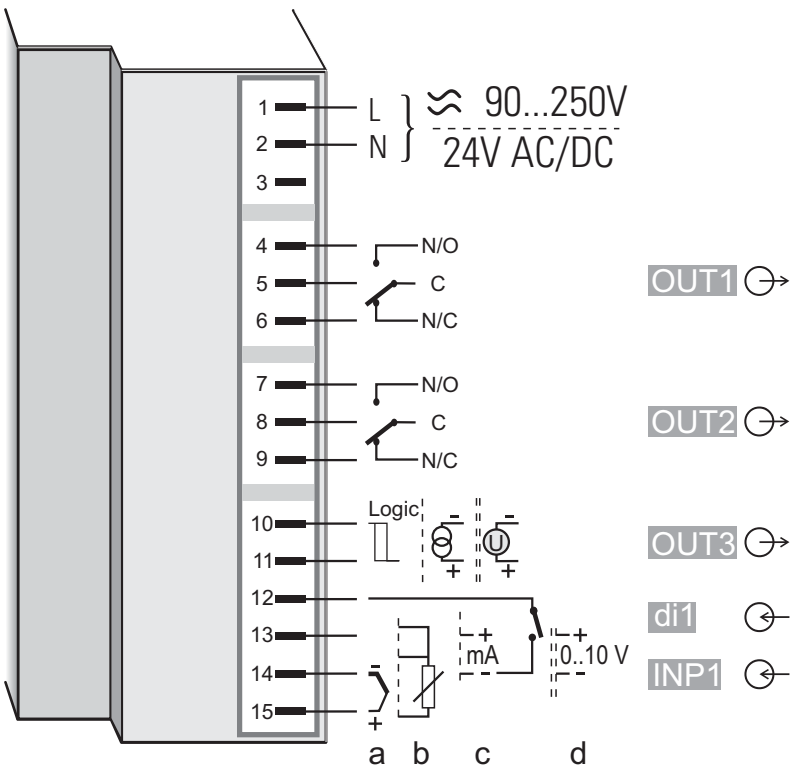

\* Safety switch 10V ↔ mA/Pt (input INP1 current "10V" ↔ mA/Pt/mV)

\*\* Safety switch U ↔ I (output OUT3 current "U" ↔ voltage "I")

**2.2 Connecting diagram for the options card**

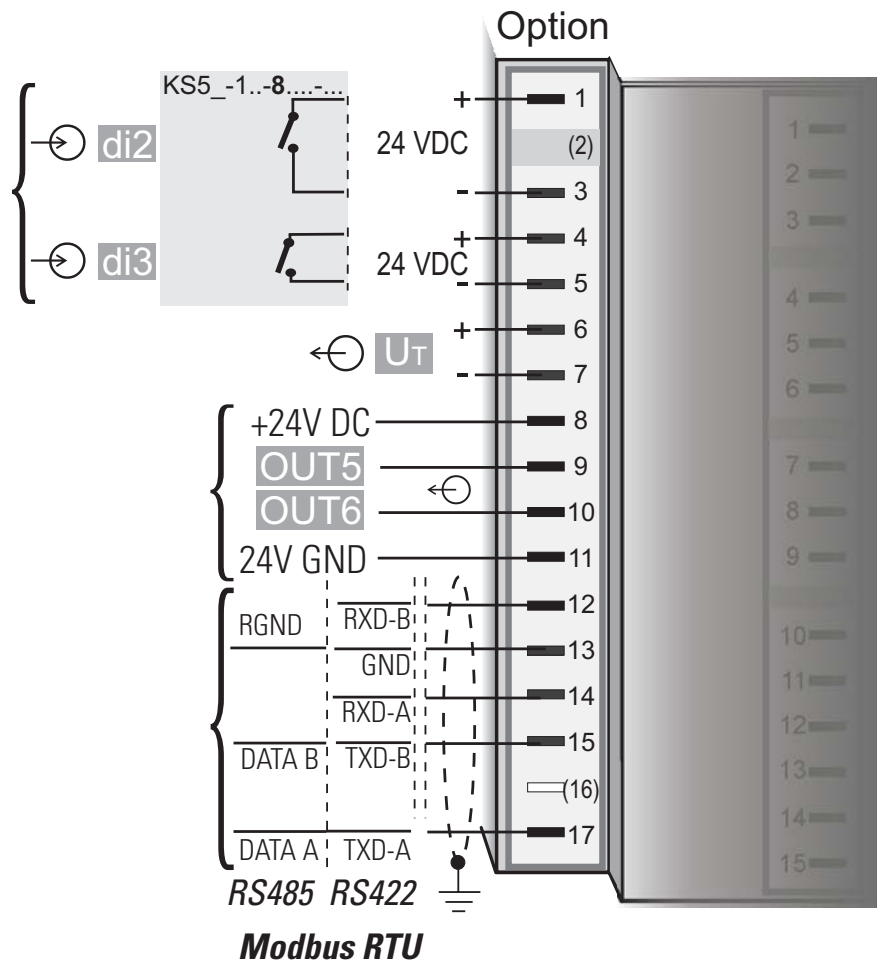

- i** According to order the controller is fitted with:

  - flat-pin terminals combined for 1 x 6,3mm or 2 x 2,8mm to DIN 46 244
  - or screw terminals for conductor cross section from 0,5 to 2,5mm<sup>2</sup>

On instruments with screw terminals, the stripping length must be min. 12 mm. Select end crimps accordingly.

**2.3 Terminal connection**

**Power supply connection 1**

See chapter 11 "Technical data"

**Connection of input INP1 2**

Input for variable x1 (process value)

- a** thermocouple
- b** resistance thermometer (Pt100/ Pt1000/ KTY/ ...)
- c** current (0/4...20mA)
- d** voltage (0/2...10V) \*Note: consider the safety switches.



## Connection of input INP2 ③

Sensor type 0...50mA AC or 0/4 ... 20 mA DC for heating current input, external set-point or external correcting variable Y.E.

## Connection of input di1 ④

Digital input, configurable as a switch direct / inverse or a push-button. \*\*\*

## Connection of outputs OUT1/2 ⑤

Relay outputs 250V/2A normally open with common contact connection

## Connection of output OUT3 ⑥

### Relay-output

KS5 \_1 0- 00 \_ \_ \_ \_ or

KS5 \_1 1- 00 \_ \_ \_ \_

- Relay (250V/2A), potential-free changeover contact

### Universal-output

KS5 \_1 2- 00 \_ \_ \_ \_ or

KS5 \_1 3- 00 \_ \_ \_ \_

- Current (0/4...20mA)

- Voltage (0/2...10V)

- Transmitter power supply

- Logic (0..20mA / 0..12V)

## Connection of inputs di2/3 ⑦ (option)

Configurable as a switch direct / inverse or as a push-button. \*\*\*

- Opto-coupler input

KS5 \_1 \_ -100 \_ \_ \_ \_

Digital inputs (24VDC external) galvanically isolated.

- Potential-free contact input

KS5 \_1 \_ -800 \_ \_ \_ \_

## Connection of output $U_T$ ⑧ (option)

Supply voltage connection for external energization


## Connection of outputs OUT5/6 ⑨ (option)

Digital outputs (opto-coupler), galvanic isolated, common positive control voltage, output rating: 18...32VDC


## Connection of bus interface ⑩ (option)

RS422/485 interface with Modbus RTU protocol

## ③ INP2 current transformer

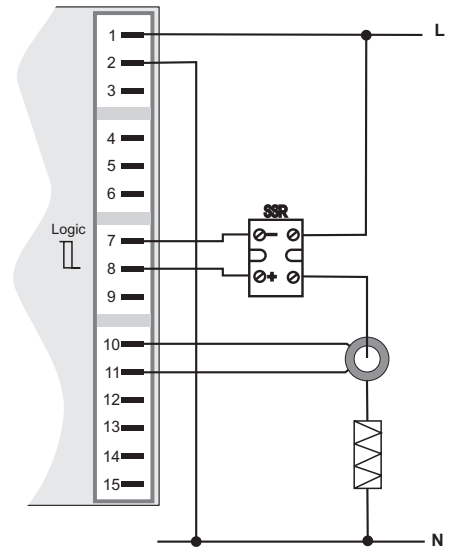


## ⑤ OUT1/2 heating/cooling

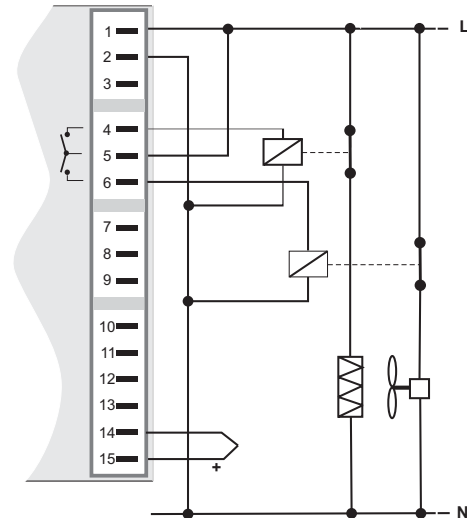


\*\*\* Adjustment is possible only in common for all digital inputs.

**8** 2-wire transmitter supply with  $U_T$

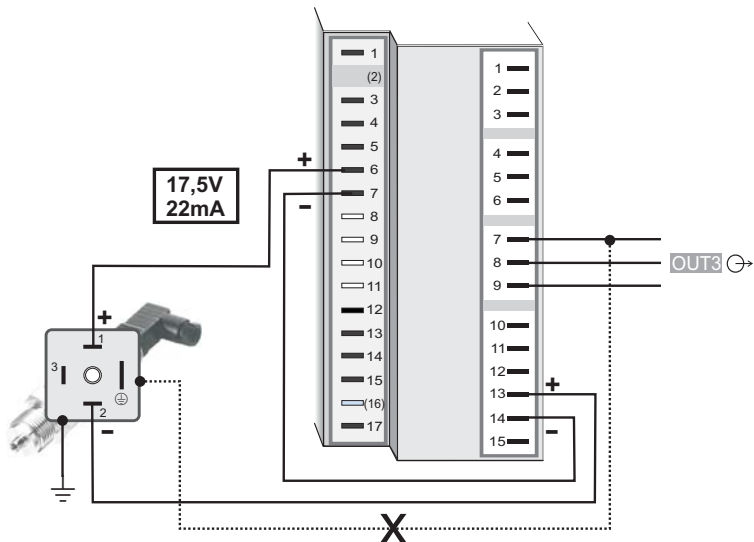


**6** OUT3 transmitter supply

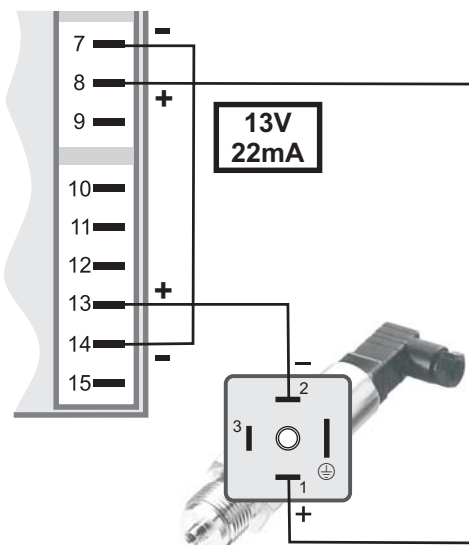


**!** The analog outputs OUT3 and transmitter supply voltage  $U_T$  are connected to different voltage potentials. For this reason, an external galvanic connection of OUT3 and  $U_T$  is not permissible for analog outputs.


**7** Connection of inputs di 2/3

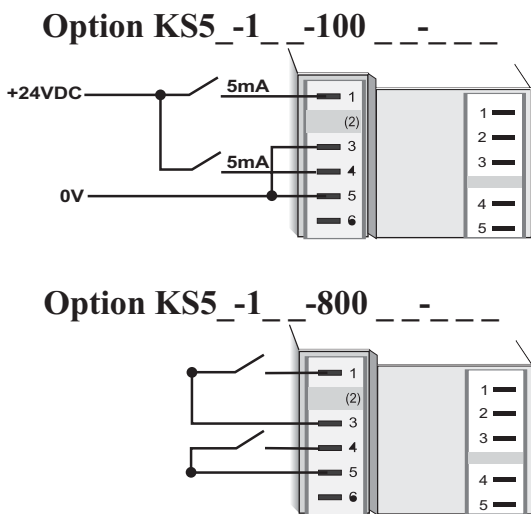

**6** OUT3 as logic output with solid-state relay (series and parallel connection)

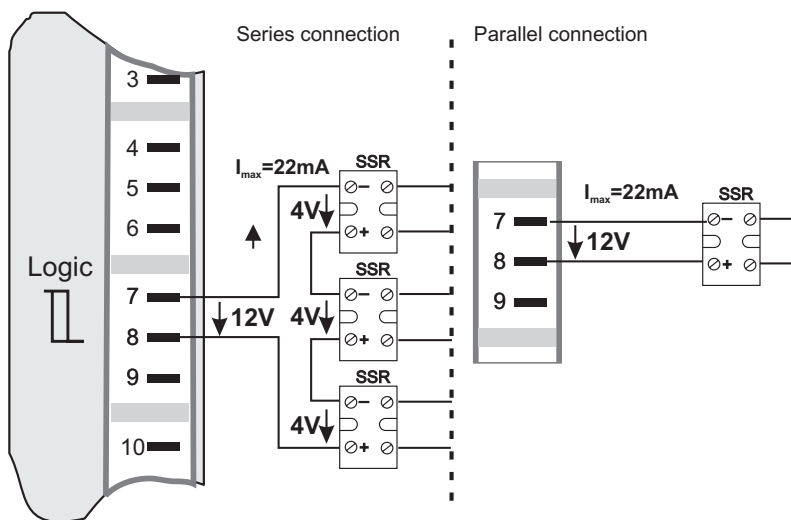


## ⑩ RS485 interface (with RS232-RS485 interface converter) \*\*\*\*

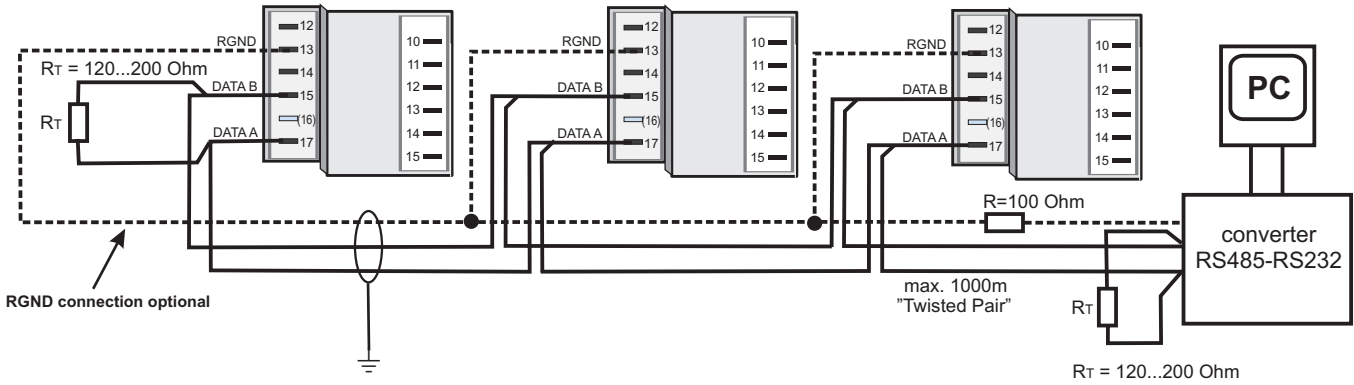

\*\*\*\*see Interface description Modbus RTU 9499-040-63611 .

## KS5\_-1\_2-\_00\_-\_-\_-\_. connecting example:

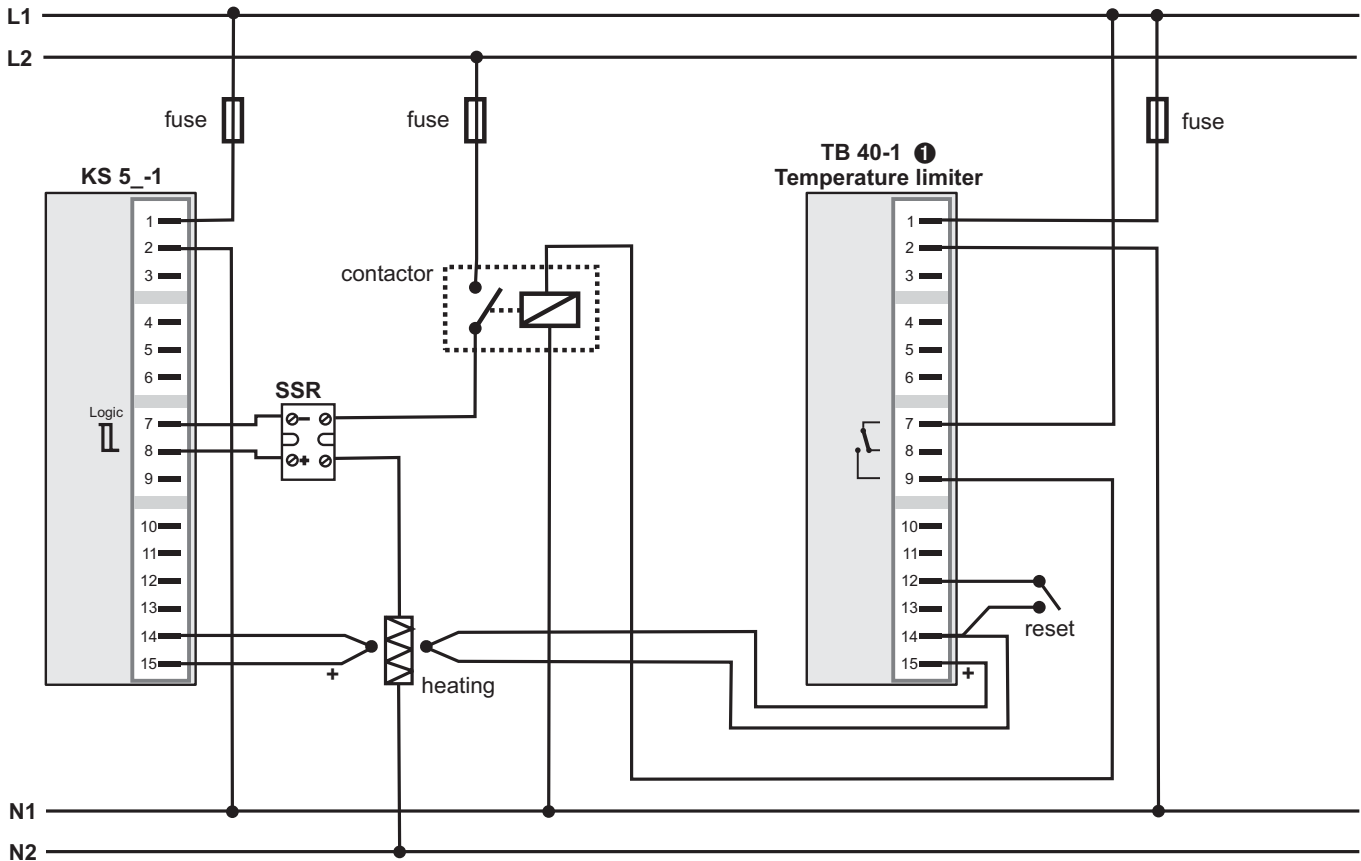


① TB 40-1 Temperature limiter  
Standard version (3 relays):  
TB40-100-0000D-000  
→ other versions on request



**CAUTION:** Using a temperature limiter is recommendable in systems where overtemperature implies a fire hazard or other risks.

**3** Operation

**3.1** Front view

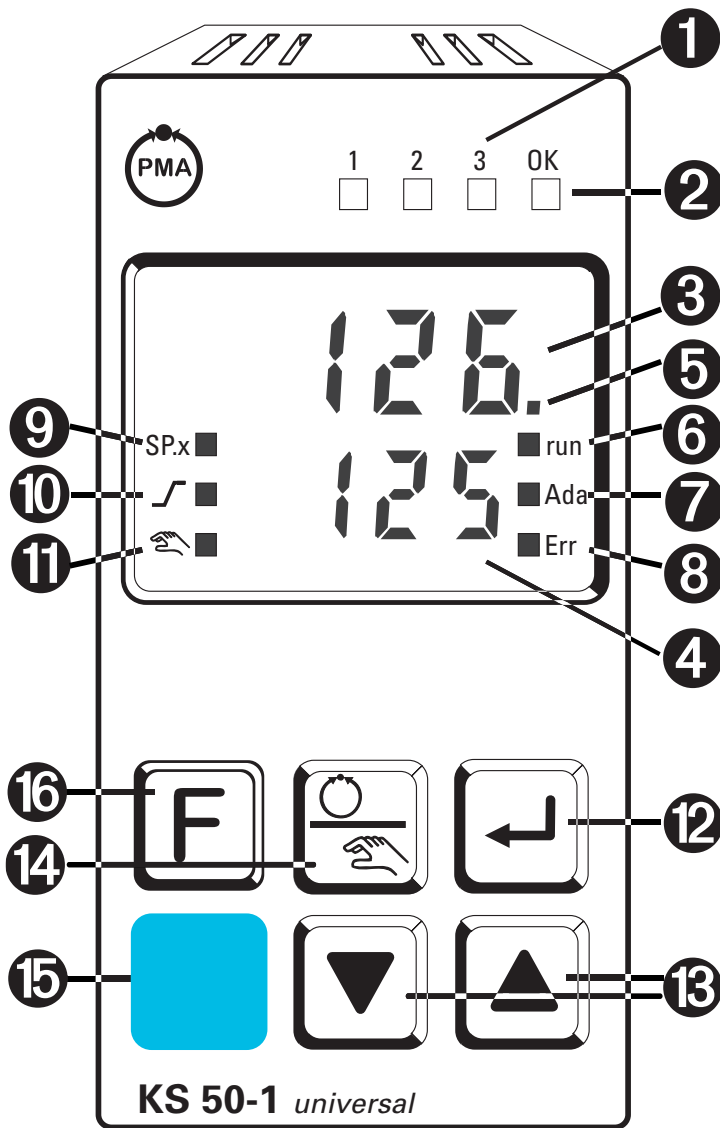

- ❶ For function states / see LED assignment (CONF/other/LED)
- ❷ Lit with limit value 1 (PARA/Lim) not exceeded
- ❸ Process value display
- ❹ Set-point, controller output
- ❺ Signals CONF and PARA level
- ❻ Programmer running
- ❼ Self-tuning active
- ❽ Entry in error list
- ❾ Set-point SP.2 or SPE is effective
- ❿ Set-point gradient effective
- ⓫ Manual/automatic switch-over:  
Off: Automatic  
On: Manual  
(changing possible)  
Blinks: Manual  
(changing not possible  
(→ CONF/ENTER/ÄÄÄ))
- ⓫ Enter key:  
calls up extended operating level / error list
- ⓫ Up/down keys:  
changing the set-point or the controller output value
- ⓫ Manual mode /spec. function (CONF/LOG)
- ⓫ PC connection for BlueControl (engineering tool)
- ⓫ Freely programmable function key

**LED colours:**

LED 1, 2, 3: yellow  
 LED OK: green  
 other LEDs: red

**i** In the upper display line, the process value is always displayed. At parameter, configuration, calibration as well as extended operating level, the bottom display line changes cyclical between parameter name and parameter value.


### 3.2 Behaviour after power-on

After supply voltage switch-on, the unit starts with the **operating level**. The unit is in the condition which was active before power-off.


If the controller was in manual mode before power-off, the controller starts with the last correcting value after switching on again.

### 3.3 Operating level

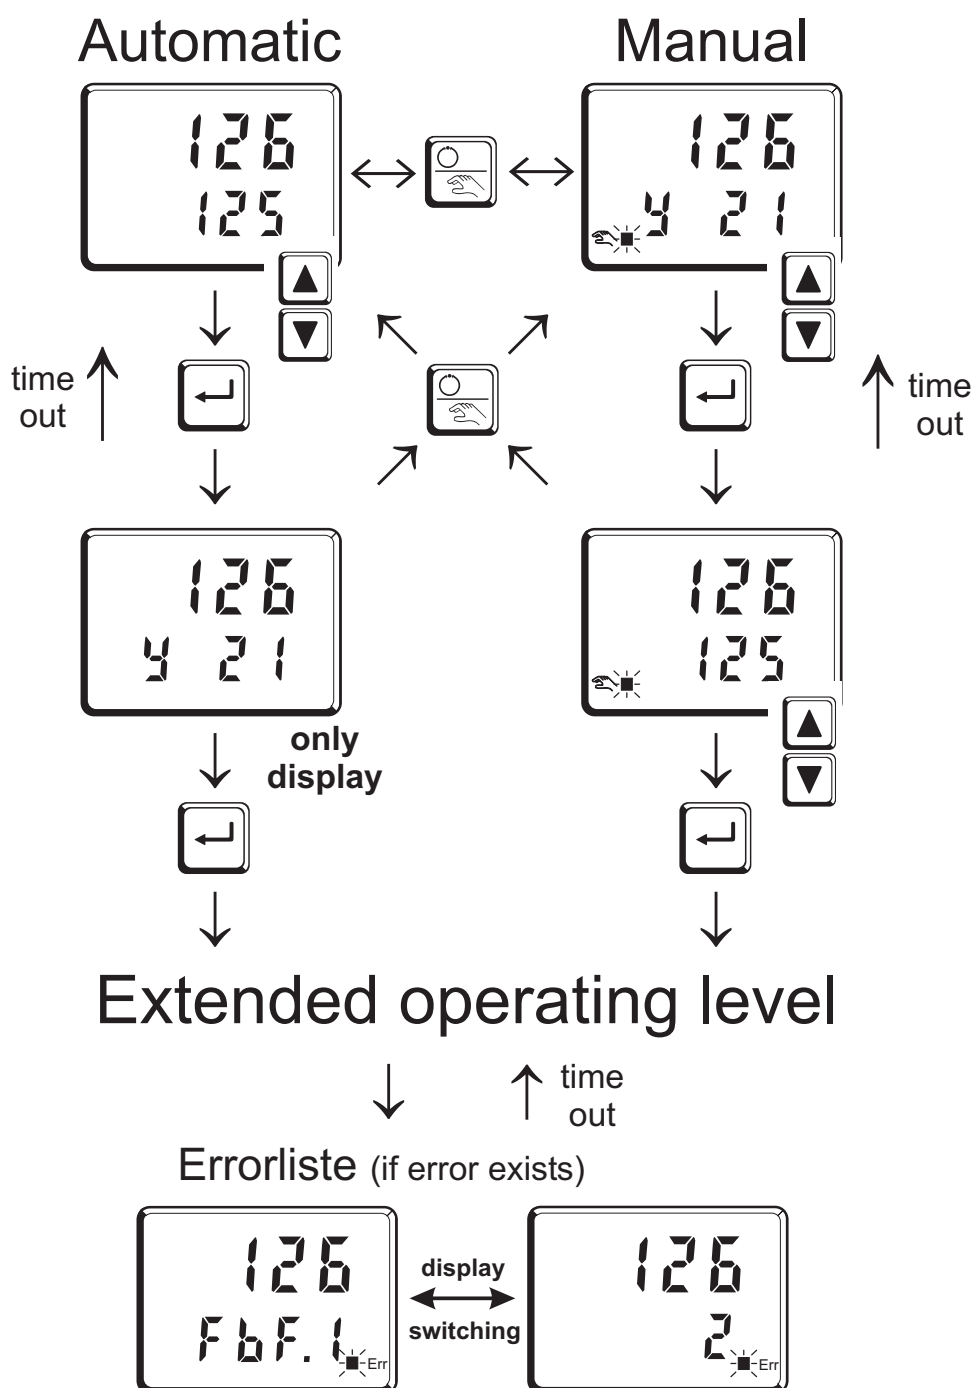

The content of the extended operating level is determined by means of BlueControl (engineering tool). Parameters which are used frequently or the display of which is important can be copied to the extended operating level.



### 3.4 Maintenance manager / Error list

With one or several errors, the extended operating level always starts with the error list. Signalling an actual entry in the error list (alarm, error) is done by the Err LED in the display. This is applicable only, if at least one limit value function, the loop alarm or the heating current alarm is activated. For display of the error list, press  twice.



| Err LED status       | Signification                            | Proceed as follows   |
|----------------------|--|--|
| blinks<br>(Status 2) | Alarm due to existing error              | Determine the error type in the error list after removing the error the device changes to Status 1   |
| lit<br>(Status 1)    | Error removed,<br>Alarm not acknowledged | Acknowledge the alarm in the error list pressing key  or  the alarm entry is deleted (Status 0). |
| off<br>(Status 0)    | No error,<br>all alarm entries deleted   | not visible, except when acknowledging   |

#### Error list:

| Name  | Description                         | Cause   | Possible remedial action  |
|-------|-------------------------------------|---|---|
| E.1   | Internal error, cannot be removed   | ▪ E.g. defective EEPROM   | ▪ Contact PMA service<br>▪ Return unit to our factory   |
| E.2   | Internal error, can be reset        | ▪ e.g. EMC trouble  | ▪ Keep measurement and power supply cables in separate runs<br>▪ Ensure that interference suppression of contactors is provided |
| E.4   | Hardware error                      | ▪ Codenumber and hardware are not identical   | ▪ Contact PMA service<br>▪ Electronic-/Optioncard must be exchanged   |
| FbF.1 | Sensor break INP1                   | ▪ Sensor defective<br>▪ Faulty cabling  | ▪ Replace INP1 sensor<br>▪ Check INP1 connection  |
| ShE.1 | Short circuit INP1                  | ▪ Sensor defective<br>▪ Faulty cabling  | ▪ Replace INP1 sensor<br>▪ Check INP1 connection  |
| POL.1 | INP1 polarity error                 | ▪ Faulty cabling  | ▪ Reverse INP1 polarity   |
| FbF.2 | Sensor break INP2                   | ▪ Sensor defective<br>▪ Faulty cabling  | ▪ Replace INP2 sensor<br>▪ Check INP2 connection  |
| ShE.2 | Short circuit INP2                  | ▪ Sensor defective<br>▪ Faulty cabling  | ▪ Replace sensor INP2<br>▪ Check INP2 connection  |
| POL.2 | INP2 polarity                       | ▪ Faulty cabling  | ▪ Reverse INP2 polarity   |
| HCA   | Heating current alarm (HCA)         | ▪ Heating current circuit interrupted, $I < HCA$ or $I > HCA$ (dependent of configuration)<br>▪ Heater band defective | ▪ Check heating current circuit<br>▪ If necessary, replace heater band  |
| SSr   | Heating current short circuit (SSR) | ▪ Current flow in heating circuit at controller off<br>▪ SSR defective  | ▪ Check heating current circuit<br>▪ If necessary, replace solid-state relay  |

| Name  | Description                              | Cause   | Possible remedial action   |
|-------|--|---|--|
| LOOP  | Control loop alarm (LOOP)                | <ul style="list-style-type: none"> <li>Input signal defective or not connected correctly</li> <li>Output not connected correctly</li> </ul> | <ul style="list-style-type: none"> <li>Check heating or cooling circuit</li> <li>Check sensor and replace it, if necessary</li> <li>Check controller and switching device</li> </ul> |
| AdRH  | Self-tuning heating alarm (ADAH)         | <ul style="list-style-type: none"> <li>See Self-tuning heating error status</li> </ul>  | <ul style="list-style-type: none"> <li>see Self-tuning heating error status</li> </ul>   |
| AdRL  | Self-tuning heating alarm cooling (ADAC) | <ul style="list-style-type: none"> <li>See Self-tuning cooling error status</li> </ul>  | <ul style="list-style-type: none"> <li>see Self-tuning cooling error status</li> </ul>   |
| Lim.1 | stored limit alarm 1                     | <ul style="list-style-type: none"> <li>adjusted limit value 1 exceeded</li> </ul>   | <ul style="list-style-type: none"> <li>check process</li> </ul>  |
| Lim.2 | stored limit alarm 2                     | <ul style="list-style-type: none"> <li>adjusted limit value 2 exceeded</li> </ul>   | <ul style="list-style-type: none"> <li>check process</li> </ul>  |
| Lim.3 | stored limit alarm 3                     | <ul style="list-style-type: none"> <li>adjusted limit value 3 exceeded</li> </ul>   | <ul style="list-style-type: none"> <li>check process</li> </ul>  |
| Inf.1 | time limit value message                 | <ul style="list-style-type: none"> <li>adjusted number of operating hours reached</li> </ul>  | <ul style="list-style-type: none"> <li>application-specific</li> </ul>   |
| Inf.2 | duty cycle message (digital outputs)     | <ul style="list-style-type: none"> <li>adjusted number of duty cycles reached</li> </ul>  | <ul style="list-style-type: none"> <li>application-specific</li> </ul>   |

**i** Saved alarms (Err-LED is lit) can be acknowledged and deleted with the digital input di1/2/3, the **[F]**-key or the **[OK]**-key or the Configuration, see page 36: **CONF / LOG1 / Error**

**i** If an alarm is still valid that means the cause of the alarm is not removed so far (Err-LED blinks), then other saved alarms can not be acknowledged and deleted. Not applicable to heating current alarm.

**Error status:**

**Self-tuning heating ( AdRH ) and cooling ( AdRL ) error status:**

| Error status | Description   | Behaviour  |
|--------------|---|--|
| 0            | No error  |  |
| 3            | Faulty control action                               | Re-configure controller (inverse ↔ direct)   |
| 4            | No response of process variable                     | The control loop is perhaps not closed: check sensor, connections and process  |
| 5            | Low reversal point                                  | Increase ( AdRH ) max. output limiting <b>YH</b> , or decrease ( AdRL ) min. output limiting <b>YL</b> .                           |
| 6            | Danger of exceeded set-point (parameter determined) | If necessary, increase (inverse) or reduce (direct) set-point  |
| 7            | Output step change too small ( $\Delta y > 5\%$ )   | Increase ( AdRH ) max. output limiting <b>YH</b> , or reduce ( AdRL ) min. output limiting <b>YL</b> .                             |
| 8            | Set-point reserve too small                         | Increase set-point (invers), reduce set-point (direct) or increase set-point range (→ <b>PARA / SETP / SPLO</b> and <b>SPH</b> , ) |
| 9            | Impulse tuning failed                               | The control loop is perhaps not closed: check sensor, connections and process  |

### 3.5 Self-tuning

For determination of optimum process parameters, self-tuning is possible. After starting by the operator, the controller makes an adaptation attempt, whereby the process characteristics are used to calculate the parameters for fast line-out to the set-point without overshoot.

**The following parameters are optimized when self-tuning:**

**Parameter set 1:**

|          |   |
|----------|---|
| $Pb1$    | Proportional band 1 (heating) in engineering units [e.g. °C]  |
| $t_{i1}$ | Integral time 1 (heating) in [s] → only, unless set to $OFF$  |
| $t_{d1}$ | Derivative time 1 (heating) in [s] → only, unless set to $OFF$  |
| $t_1$    | Minimum cycle time 1 (heating) in [s]. This parameter is optimized only, unless parameter $Control/Reset0$ was configured for “no self-tuning” using BlueControl® |
| $Pb2$    | Proportional band 2 (cooling) in engineering units [e.g. °C]  |
| $t_{i2}$ | Integral time 2 (cooling) in [s] → only, unless set to $OFF$  |
| $t_{d2}$ | Derivative time 2 (cooling) in [s] → only, unless set to $OFF$  |
| $t_2$    | Minimum cycle time 2 (cooling) in [s]. This parameter is optimized only, unless parameter $Control/Reset0$ was configured for “no self-tuning” using BlueControl® |

**Parameterset 2:** according to Parameterset 1 (see page 24)

#### 3.5.1 Preparation before self-tuning



- As a prerequisite of process evaluation, a stable condition is required. For this reason, the controller waits, until the process has reached a stable condition after self-tuning start.  
The rest condition is considered as reached, when the process value oscillation is smaller than 0,5% of  $(r_{nGH} - r_{nGL})$ . The limits of the control range must be adjusted for the controller operating range, i.e.  $r_{nGL}$  and  $r_{nGH}$  must be adjusted to the limits within which control must take place (Configuration → Controller → span start and end of control range)  $CONF \rightarrow Control \rightarrow r_{nGL}$  and  $r_{nGH}$
- For starting the self-tuning after start-up, a clearance of 10% of  $(SPLO \dots SPHi)$  is required. As the values  $PARR/SEtP/SPLO$  and  $PARR/SEtP/SPHi$  must always be within the control range, no restriction is applicable if these values are adjusted correctly.
- Determine which parameter set must be optimized.  
-The currently effective parameter set is optimized.  
→ activate the corresponding parameter set (1 or 2).
- Determine which parameter must be optimized (see the list given above)
- Select the method for self-tuning  
See Chapter 3.5.6  
- Step attempt after start-up  
- Pulse attempt after start-up  
- Optimization at the set-point



### 3.5.2 Self-tuning start

**i** Self-tuning start can be disabled using BlueControl<sup>®</sup> (engineering tool) (CONF/Other/AdA).

#### Starting the self-tuning:

Self-tuning is started by pressing the  and  keys simultaneously, or via the interface. If parameter CONF/Enter/Start is set to 1 self-tuning starts also after power-on and when detecting process value oscillations.



#### Self-tuning status display

| Ada-LED-Status | Meaning                           |
|----------------|-----------------------------------|
| blinks         | Waiting until process is at rest  |
| lit            | self tuning running               |
| off            | self tuning not active e.g. ready |



### 3.5.3 Self-tuning cancellation

- **By the operator:**

Self-tuning is cancelled by pressing the  and  keys simultaneously. Switching over to manual operation also causes cancellation of the self-tuning procedure.

After self-tuning cancellation, the controller continues operating using the parameters valid prior to self-tuning start.

- **By the controller:**





If the Err LED starts blinking during self-tuning, successful self-tuning is prevented due to the control conditions. In this case, self-tuning was cancelled by the controller. The controller continues operating using the parameters valid before self-tuning start.

If the self-tuning method with step attempt was used **and** self-tuning was started from the manual mode, the controller uses the last valid correcting variable after self-tuning start, until the self-tuning error message is acknowledged. Subsequently, the controller continues operating using the parameters valid before self-tuning start.

#### Causes of cancellation:

Page 8: " Self-tuning heating (AdA.H) and cooling (AdA.C) error status"

### 3.5.4 Acknowledgement of failed self-tuning

When pressing the  key, the controller switches over to correcting variable display (Y ....). After pressing the  key again, the controller goes to the error list of the extended operating level. The error message can be acknowledged by switching the message to 0 using the  or the  key.

After acknowledging the error message, the controller continues operating in the automatic mode, using the parameters valid prior to self-tuning start.

### 3.5.5 Optimization after start-up or at the set-point

The two methods are optimization after start-up and at the set-point.

As control parameters are always optimal only for a limited process range, various methods can be selected dependent of requirements. If the process behaviour is very different after start-up and directly at the set-point, parameter sets 1 and 2 can be optimized using different methods. Switch-over between parameter sets dependent of process status is possible (see page ).

**Optimization after start-up:** (see page 18)

Optimization after start-up requires a certain separation between process value and set-point. This separation enables the controller to determine the control parameters by evaluation of the process when lining out to the set-point.

This method optimizes the control loop from the start conditions to the set-point, whereby a wide control range is covered.

We recommend selecting optimization method “**Step attempt after start-up**” with  $t_{\text{unE}} = 0$  first. Unless this attempt is completed successfully, we then recommend a “**Pulse attempt after start-up**”.

**Optimization at the set-point:** (see page 19)

For optimizing at the set-point, the controller outputs a disturbance variable to the process. This is done by changing the output variable shortly. The process value changed by this pulse is evaluated. The detected process parameters are converted into control parameters and saved in the controller.

This procedure optimizes the control loop directly at the set-point. The advantage is in the small control deviation during optimization.

### 3.5.6 Selecting the method (CONF / Enter / t<sub>unE</sub>)

Selection criteria for the optimization method:

|                      | Step attempt after start-up               | Pulse attempt after start-up             | Optimization at the set-point                       |
|----------------------|---|--|---|
| $t_{\text{unE}} = 0$ | sufficient set-point reserve is provided  |  | sufficient set-point reserve is <b>not</b> provided |
| $t_{\text{unE}} = 1$ |   | sufficient set-point reserve is provided | sufficient set-point reserve is <b>not</b> provided |
| $t_{\text{unE}} = 2$ | Only step attempt after start-up required |  |   |

**Sufficient set-point reserve:**

inverse controller:(with process value < set-point- (10% of  $r_{\text{NH}} - r_{\text{NL}}$  )

direct controller: (with process value > set-point + (10% of  $r_{\text{NH}} - r_{\text{NL}}$  )

inverse controller:

process value is (10% of  $r_{\text{NH}} - r_{\text{NL}}$  ) below the set-point

direct controller:

process value is (10% of  $r_{\text{NH}} - r_{\text{NL}}$  ) above the set-point

### Step attempt after start-up

Condition:  $-E_{SP} = 0$  and sufficient set-point reserve provided **or**  
 $-E_{SP} = 2$

The controller outputs 0% correcting variable or  $Y_{L0}$  and waits, until the process is at rest (see start-conditions on page 8).

Subsequently, a correcting variable step change to 100% or  $Y_{H1}$  is output. The controller attempts to calculate the optimum control parameters from the process response. If this is done successfully, the optimized parameters are taken over and used for line-out to the set-point.

With a *3-point controller*, this is followed by “cooling”.

After completing the 1st step as described, a correcting variable of -100% or  $Y_{L0}$  (100% cooling energy) is output from the set-point. After successful determination of the “cooling parameters”, line-out to the set-point is using the optimized parameters.

### Pulse attempt after start-up

Condition:  $-E_{SP} = 1$  and sufficient set-point reserve provided.

The controller outputs 0% correcting variable or  $Y_{L0}$  and waits, until the process is at rest (see start conditions page 8)

Subsequently, a short pulse of 100% or  $Y_{H1}$  is output ( $Y=100\%$ ) and reset.

The controller attempts to determine the optimum control parameters from the process response. If this is completed successfully, these optimized parameters are taken over and used for line-out to the set-point.

With a *3-point controller*, this is followed by “cooling”.

After completing the 1st step as described and line-out to the set-point, correcting variable "heating" remains unchanged and a cooling pulse (100% cooling energy) is output **additionally**. After successful determination of the “cooling parameters”, the optimized parameters are used for line-out to the set-point.

### Optimization at the set-point


Conditions:

- A sufficient set-point reserve is **not** provided at self-tuning start (see page 18).
- $E_{SP}$  is 0 or 1
- With  $S_{err} = 1$  configured and detection of a process value oscillation by more than 0,5% of  $(r_{nH} - r_{nL})$  by the controller, the control parameters are preset for process stabilization and the controller realizes an *optimization at the set-point* (see figure “Optimization at the set-point”).
- when the step attempt after power-on has failed
- with active gradient function ( $PARA/STEP/RSPOFF$ ), the set-point gradient is started from the process value and there isn't a sufficient set-point reserve.

## Optimization-at-the-set-point procedure:

The controller uses its instantaneous parameters for control to the set-point. In lined out condition, the controller makes a pulse attempt. This pulse reduces the correcting variable by max. 20% ❶, to generate a slight process value undershoot. The changing process is analyzed and the parameters thus calculated are recorded in the controller. The optimized parameters are used for line-out to the set-point.

### Optimization at the set-point

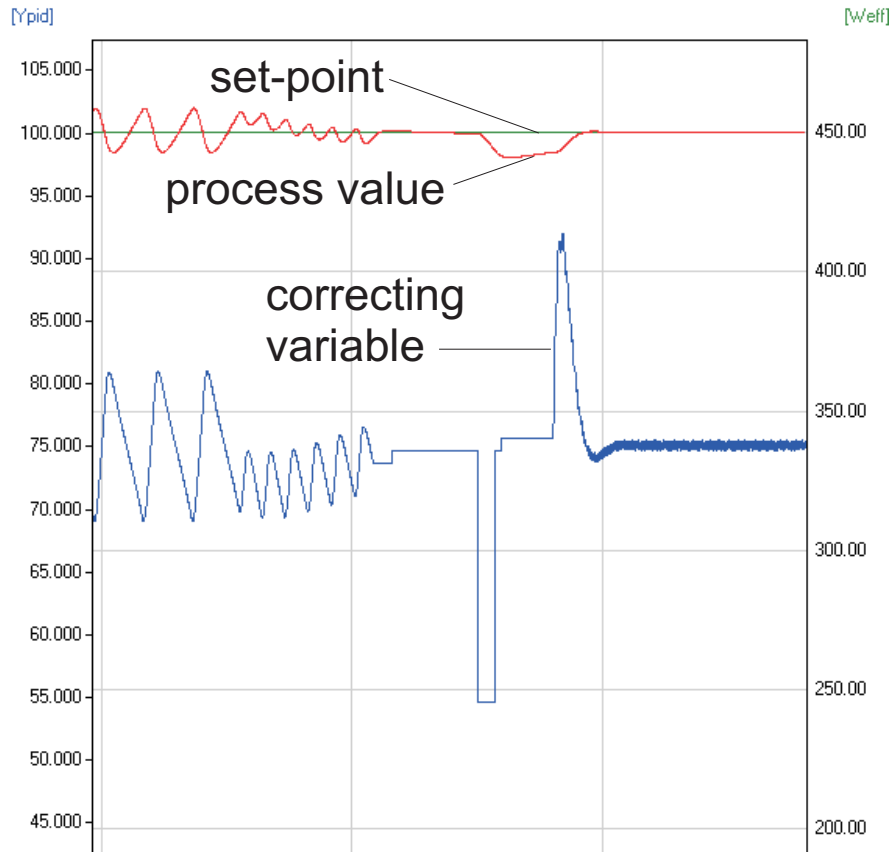

With a *3-point controller*, optimization for the “heating“ or “cooling” parameters occurs dependent of the instantaneous condition.


While the controller is in the "heating-phase" the heating-parameters are determined. If the controller is in the "cooling-phase" the cooling-parameters are determined.

❶ If the correcting variable is too low for reduction in lined out condition it is increased by max. 20%.

### 3.5.7 Optimization at the set-point for 3-point stepping controller

As position feedback is not provided, the controller calculates the actuator position internally by adjusting an integrator with the adjusted actuator travel time. For this reason, precise entry of the actuator travel time ( $t_t$ ), as time between stops is highly important.

Due to position simulation, the controller knows whether an increased or reduced pulse must be output. After supply voltage switch-on, position simulation is at 50%. When the motor actuator was varied by the adjusted travel time in one go, internal calculation occurs, i.e. the position corresponds to the simulation:

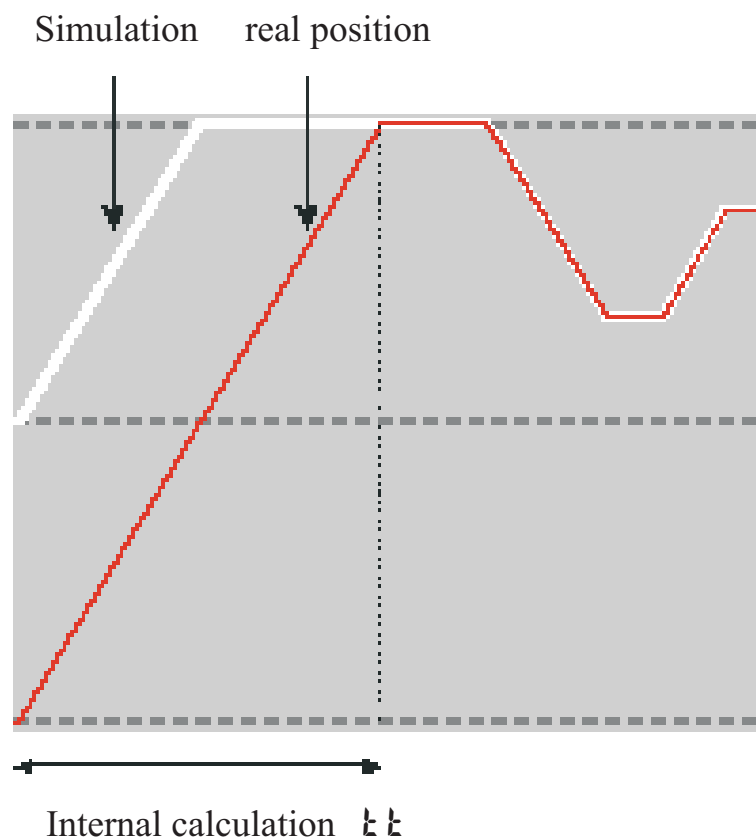

Internal calculation always occurs, when the actuator was varied by travel time  $t_t$  ***in one go***, independent of manual or automatic mode. When interrupting the variation, internal calculation is cancelled. Unless internal calculation occurred already after self-tuning start, it will occur automatically by closing the actuator once.


Unless the positioning limits were reached within 10 hours, a significant deviation between simulation and actual position may have occurred. In this case, the controller would realize minor internal calculation, i.e. the actuator would be closed by 20 %, and re-opened by 20 % subsequently. As a result, the controller knows that there is a 20% reserve for the attempt.

### 3.5.8 Examples for self-tuning attempts

(controller inverse, heating or heating/cooling)


**Start: heating power switched on**

Heating power Y is switched off (1). When the change of process value X was constant during one minute (2), the power is switched on (3). At the reversal point, the self-tuning attempt is finished and the new parameter are used for controlling to set-point W.

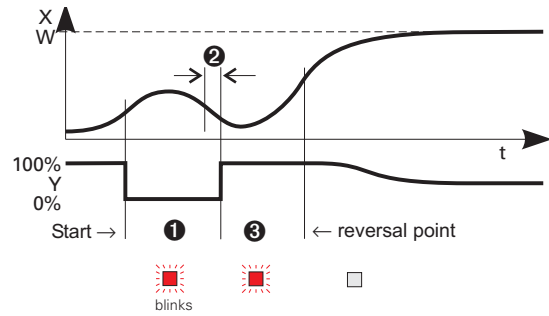


**Start: heating power switched off**

The controller waits 1,5 minutes (1). Heating power Y is switched on (2). At the reversal point, the self-tuning attempt is finished and control to the set-point is using the new parameters.

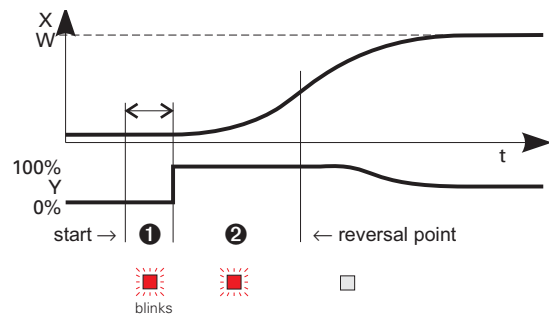


**Self-tuning at the set-point** ⚠

The process is controlled to the set-point. With the control deviation constant during a defined time (1), the controller outputs a reduced correcting variable pulse (max. 20%) (2). After determination of the control parameters using the process characteristic (3), control is started using the new parameters (4).

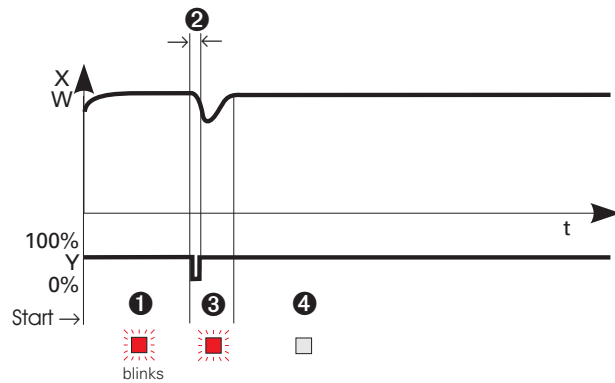

**Three-point controller** ⚠

The parameter for heating and cooling are determined in two attempts. The heating power is switched on (1). Heating parameters  $Pb1$ ,  $t1$ ,  $td1$  and  $ti1$  are determined at the reversal point. The process is controlled to the set-point (2). With constant control deviation, the controller provides a cooling correcting variable pulse (3). After determining its cooling parameters  $Pb2$ ,  $t2$ ,  $td2$  and  $ti2$  (4) from the process characteristics, control operation is started using the new parameters (5).

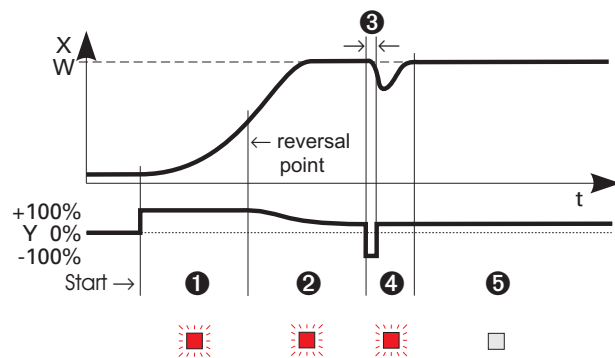


During phase 3, heating and cooling are done simultaneously!

### 3.6 Manual tuning

The optimization aid should be used with units on which the control parameters shall be set without self-tuning.

For this, the response of process variable  $x$  after a step change of correcting variable  $y$  can be used. Frequently, plotting the complete response curve (0 to 100%) is not possible, because the process must be kept within defined limits. Values  $T_g$  and  $x_{max}$  (step change from 0 to 100 %) or  $t$  and  $\Delta x$  (partial step response) can be used to determine the maximum rate of increase  $v_{max}$ .

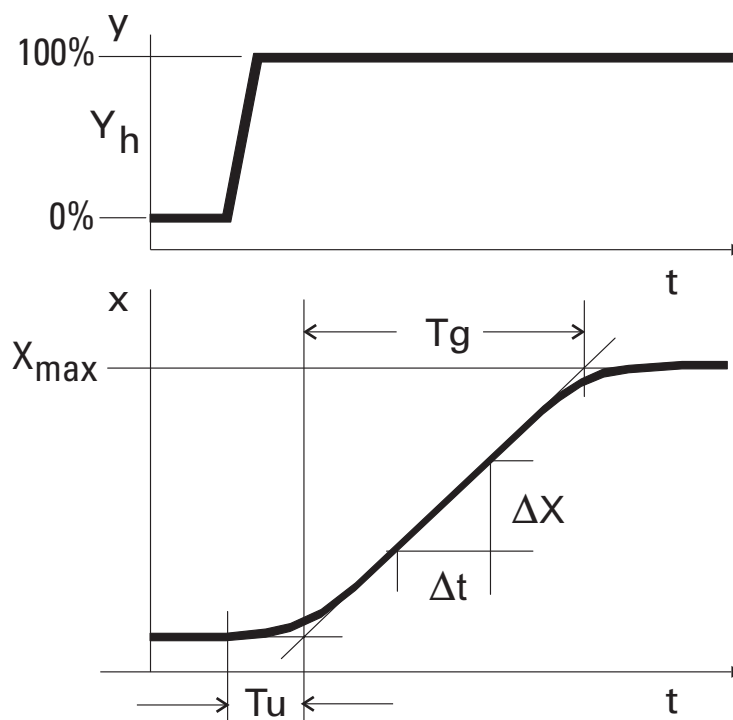

- $y$  = correcting variable
- $Y_h$  = control range
- $T_u$  = delay time (s)
- $T_g$  = recovery time (s)
- $X_{max}$  = maximum process value

$$V_{max} = \frac{X_{max}}{T_g} = \frac{\Delta x}{\Delta t} \triangleq \text{max. rate of increase of process value}$$

The control parameters can be determined from the values calculated for delay time  $T_u$ , maximum rate of increase  $v_{max}$ , control range  $X_h$  and characteristic  $K$  according to the **formulas** given below. Increase  $X_p$ , if line-out to the set-point oscillates.



## Formulas

$$K = V_{\max} * T_u$$

With 2-point and 3-point controllers, the cycle time must be adjusted to

$$t_1 / t_2 = 0,25 * T_u$$

| controller behavior | $P_b t$ [phy. units] | $t_d t$ [s] | $t_{cl}$ [s] |
|---------------------|----------------------|-------------|--------------|
| PID                 | $1,7 * K$            | $2 * T_u$   | $2 * T_u$    |
| PD                  | $0,5 * K$            | $T_u$       | <b>OFF</b>   |
| PI                  | $2,6 * K$            | <b>OFF</b>  | $6 * T_u$    |
| P                   | $K$                  | <b>OFF</b>  | <b>OFF</b>   |
| 3-point-stepping    | $1,7 * K$            | $T_u$       | $2 * T_u$    |

## Parameter adjustment effects

| Parameter       | Control           | Line-out of disturbances        | Start-up behaviour             |
|-----------------|-------------------|---------------------------------|--------------------------------|
| $P_b t$ higher  | increased damping | slower line-out                 | slower reduction of duty cycle |
| lower           | reduced damping   | faster line-out                 | faster reduction of duty cycle |
| $t_d t$ higher  | reduced damping   | faster response to disturbances | faster reduction of duty cycle |
| lower           | increased damping | slower response to disturbances | slower reduction of duty cycle |
| $t_{cl}$ higher | increased damping | slower line-out                 | slower reduction of duty cycle |
| lower           | reduced damping   | faster line-out                 | faster reduction of duty cycle |

### 3.7 Second PID parameter set

The process characteristic is frequently affected by various factors such as process value, correcting variable and material differences.

To comply with these requirements, the controller can be switched over between two parameter sets. Parameter sets  $P_{AR.1}$  and  $P_{AR.2}$  are provided for heating and cooling.

Dependent of configuration, switch-over to the second parameter set ( $CONF / LOG / PID.2$ ) is via key **F**, one of digital inputs di1, di2, di3, or interface (OPTION).




Self-tuning is always done using the active parameter set, i.e. the second parameter set must be active for optimizing.




### 3.8 Alarm handling

Max. three alarms can be configured and assigned to the individual outputs. Generally, outputs *Out.1*... *Out.6* can be used each for alarm signalling. If more than one signal is linked to one output the signals are OR linked. Each of the 3 limit values *L.1*... *L.3* has 2 trigger points *H.x* (Max) and *L.x* (Min), which can be switched off individually (parameter = "OFF"). Switching difference *HYS.x* of each limit value is adjustable.


① Operating principle absolut alarm  
L.1 = OFF

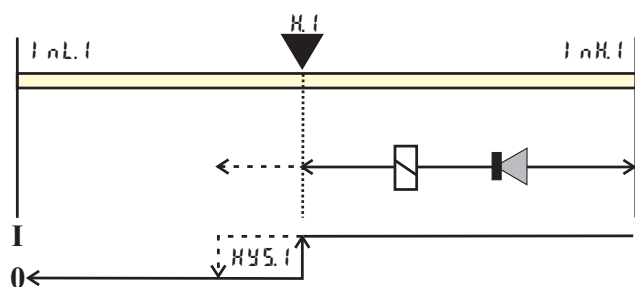




H.I = OFF

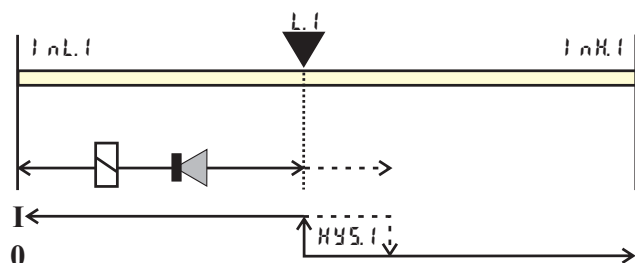

② Operating principle relative alarm  
L.1 = OFF

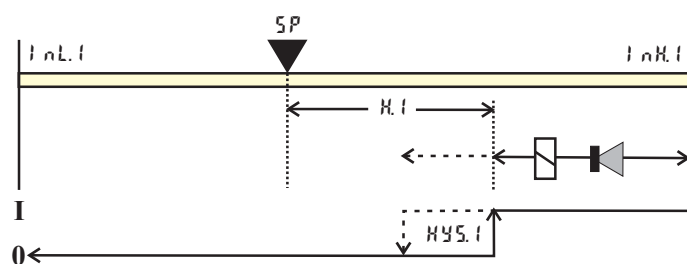

H.I = OFF

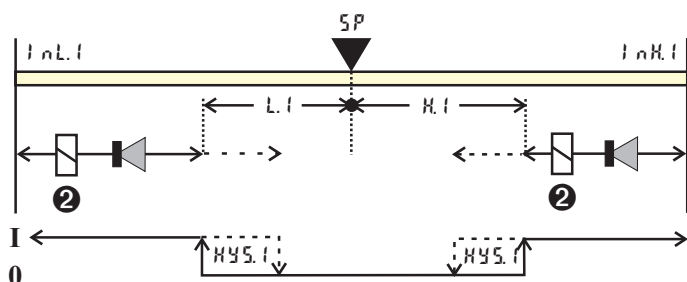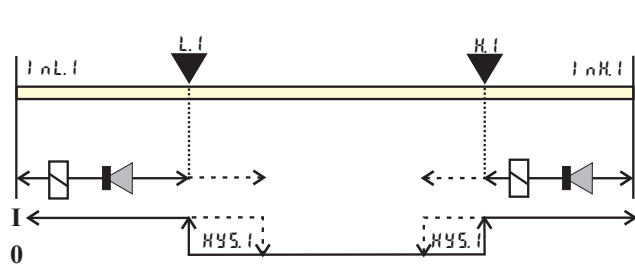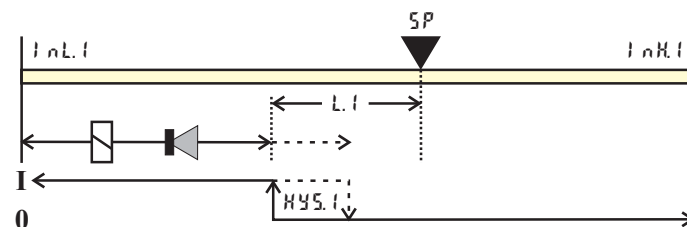

- ①: normally closed (*CONF / Out.x / ORact = 1*) (See examples)
- ②: normally open (*CONF / Out.x / ORact = 0*) (The output relay action is inverted)

**i** The allocation of the device's LEDs is not invertable and must be considered separately.

- i** The variable to be monitored can be selected separately per configuration for each alarm.

The following variables are available (CONF / Limit / Src.x):


| Variable (Src.x)   | Remark  | Alarm type |
|--|---|------------|
| Process value  |   | Absolute   |
| Control deviation xw   | Process value - effective set-point. The effective set-point $W_{eff}$ is used. E.g with a ramp, this is the changing set-point rather than the target set-point.   | Relative   |
| Control deviation xw + suppression after start-up or set-point change with time limit    | The alarm output is suppressed after switch-on or after a set-point change, until the process value is within the limits for the first time. At the latest after elapse of time $10 \times t_{int}$ the alarm is activated ( $t_{int}$ = integral time parameter $\rightarrow$ CONF). If $t_{int}$ is switched off ( $t_{int} = OFF$ ), this is considered as $\infty$ , i.e. the alarm is not activated before the process value was within the limits once. | Relative   |
| Effective set-point $W_{eff}$  | The effective set-point $W_{eff}$ for control.  | Absolute   |
| Correcting variable y  | y = controller output signal  | Absolute   |
| Deviation from SP internal   | Process value - internal set-point. The internal set-point is used. E.g. with a ramp, this is the target set-point instead of the varying effective set-point $W_{eff}$ .   | Relative   |
| Control deviation xw + suppression after start-up or set-point change without time limit | After switch-on or after a set-point change, the alarm output is suppressed, until the process value is within the limits for the first time.   | Relative   |

- i** During alarm configuration, the following functions can be selected (CONF / Limit / Func.x):

| Function (Func.x)      | Remark   |
|------------------------|--|
| Switched off           | No limit value monitoring.   |
| Measured value         | Process value monitoring. When exceeding the limit, an alarm is generated. The alarm is reset automatically, when the process value is "within the limits" (including hysteresis) again. |
| Measured value + latch | Process value monitoring + latching of the alarm condition. When exceeding the limit value, an alarm is output. A latched alarm persists, until it is reset manually.                    |

### 3.9 Operating structure

After supply voltage switch-on, the controller starts with the **operating levels**. The controller status is as before power off.

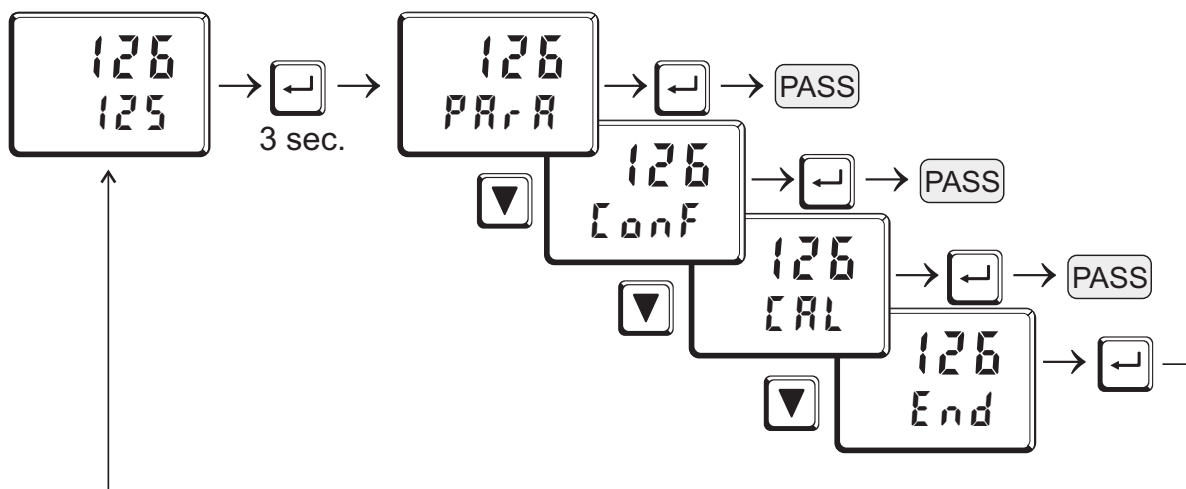

- i** **PArA** - level: At **PArA** - level, the right decimal point of the upper display line is *lit continuously*.
- i** **CONF** - level: At **CONF** - level, the right decimal point of upper display line *blinks*.

**PASS**

When safety switch **Loc** is open, only the levels enabled by means of BlueControl<sup>®</sup> (engineering tool) are visible and accessible by entry of the password adjusted by means of BlueControl (engineering tool). Individual parameters accessible without password must be copied to the extended operating level via BlueControl<sup>®</sup>.

- i** All levels disabled via password are disabled only, if safety switch **loc** also is open

Factory setting: Safety switch **Loc** closed:  
 -all levels accessible without restriction,  
 -password **PASS = OFF**.

| Safety switch <b>Loc</b> | Password entered with BluePort <sup>®</sup> | Function disabled or enabled with BluePort <sup>®</sup> | Access via the instrument front panel: |
|--------------------------|---|---|--|
| closed                   | OFF / password                              | disabled / enabled                                      | <b>enabled</b>                         |
| open                     | OFF / password                              | disabled  | <b>disabled</b>                        |
| open                     | OFF   | enabled   | <b>enabled</b>                         |
| open                     | Password                                    | enabled   | <b>enabled after password entry</b>    |


**4** Configuration level

**4.1** Configuration survey

| CONF Configuration level |                         |         |         |                       |          |              |          |          |              |                |                               |     |      |
|--------------------------|-------------------------|---------|---------|-----------------------|----------|--------------|----------|----------|--------------|----------------|-------------------------------|-----|------|
| Enter                    | Control and self-tuning | Input 1 | Input 2 | Limit value functions | Output 1 | Output 2     | Output 3 | Output 5 | Output 6     | Digital inputs | Display, operation, interface | End | Quit |
| SPFn                     | STYP                    | IFnc    | Fnc.1   | ORct                  |          |              | DEYP     |          |              | Lr             | bAud                          |     |      |
| CFnc                     | SL in                   | STYP    | Src.1   | Y.1                   |          |              | ORct     |          |              | SP.2           | Addr                          |     |      |
| hAn                      | Corr                    |         | Fnc.2   | Y.2                   |          |              | Y.1      |          |              | SPE            | PrtY                          |     |      |
| ARct                     |                         |         | Src.2   | L in.1                |          | See output 1 | Y.2      |          | See output 1 | Y.2            | dELY                          |     |      |
| FRIL                     |                         |         | Fnc.3   | L in.2                |          |              | L in.1   |          | See output 1 | hAn            |                               |     |      |
| rnGL                     |                         |         | Src.3   | L in.3                |          |              | L in.2   |          |              | CoFF           |                               |     |      |
| rnGH                     |                         |         | HCRAL   | LPAL                  |          |              | L in.3   |          |              | hLoc           |                               |     |      |
| SP.2C                    |                         |         | LPAL    | HCRAL                 |          |              | LPAL     |          |              | Errr           | Unit                          |     |      |
| CYCL                     |                         |         |         | HCS                   |          |              | HCRAL    |          |              | boos           | dP                            |     |      |
| tunE                     |                         |         |         | PEnd                  |          |              | HCS      |          |              | P id.2         |                               |     |      |
| StEt                     |                         |         |         | FR v.1                |          |              | PEnd     |          |              | P.run          |                               |     |      |
|                          |                         |         |         | FR v.2                |          |              | FR v.1   |          |              | d v.Fn         | EdEL                          |     |      |
|                          |                         |         |         |                       |          |              | FR v.2   |          |              |                |                               |     |      |
|                          |                         |         |         |                       |          |              | Out.0    |          |              |                |                               |     |      |
|                          |                         |         |         |                       |          |              | Out.1    |          |              |                |                               |     |      |
|                          |                         |         |         |                       |          |              | OSrc     |          |              |                |                               |     |      |

**Adjustment:**

- To access the configuration level, press the key for 3 seconds and then the key to select the CONF -Menu item. Press to confirm.

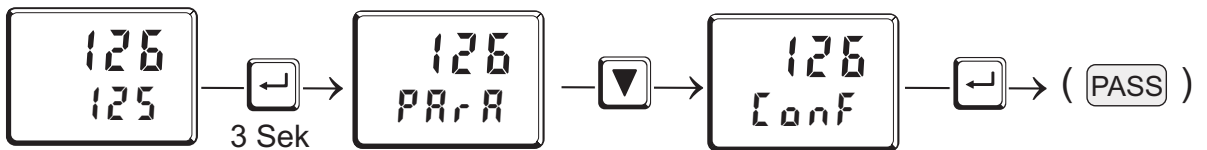

- If the password function is activated, a prompt for **PASS** is displayed.
- The configuration values can be adjusted using the - keys. Press the - key to save the value. The next configuration value is shown.
- After the last configuration value of a group, **donE** is displayed, followed by automatic changing to the next group



Return to the beginning of a group, by pressing the key for 3 sec.



Press menu item **Quit** to close/cancel configuration.

## 4.2 Configurations

### Ctrl

| Name        | Value range  | Description   | Default |
|-------------|--|---|---------|
| <b>SPFn</b> |  | <b>Basic configuration of setpoint processing</b>   | 0       |
|             | 0  | set-point controller can be switched over to external set-point (-> LOG1 / SP.E)  |         |
|             | 1  | program controller  |         |
|             | 10   | controller with start-up circuit  |         |
|             | 11   | Fixpoint / SP.E- / SP.2 -controller with start-up circuit   |         |
| <b>CFnc</b> |  | <b>Control behaviour (algorithm)</b>  | 1       |
|             | 0  | on/off controller or signaller with one output  |         |
|             | 1  | PID controller (2-point and continuous)   |         |
|             | 2  | / Y / Off, or 2-point controller with partial/full load switch-over   |         |
|             | 3  | 2 x PID (3-point and continuous)  |         |
| 4           | 3-point stepping controller  |   |         |
| <b>nRn</b>  |  | <b>Manual operation permitted</b>   | 0       |
|             | 0  | no  |         |
| 1           | yes (see also LOG1 / nRn)  |   |         |
| <b>CRct</b> |  | <b>Method of controller operation</b>   | 0       |
|             | 0  | inverse, e.g. heating<br>With decreasing process value, the correcting variable is increased, with increasing process value, the correcting variable is reduced.  |         |
| 1           | direct, e.g. cooling<br>With increasing process value, the correcting variable is increased, with decreasing process value, the correcting variable is decreased   |   |         |
| <b>FAIL</b> |  | <b>Behaviour at sensor break</b>  | 1       |
|             | 0  | controller outputs switched off   |         |
|             | 1  | y = Y2  |         |
|             | 2  | y = mean output.<br>In the event of a failure of the input signal, the mean value of the correcting variable output last is kept.<br>The maximum permissible output can be adjusted with parameter YnM.<br>To prevent determination of inadmissible values, mean value formation is only if the control deviation is lower than parameter L.Yn. |         |
| 3           | y = mean output; manual adjustment is possible.<br>In the event of a failure of the input signal, the mean value of the correcting variable output last is kept.<br>The maximum permissible output can be adjusted using parameter YnM. The mean output is measured at intervals of 1 min., when the control deviation is smaller than parameter L.Yn. |   |         |
| <b>r nL</b> | -1999...9999   | <b>X0 (lower limit of control range)</b><br>indicates the smallest value to be expected as process value.   | 0       |
| <b>r nH</b> | -1999...9999   | <b>X100 (high limit range of control)</b><br>indicates the highest value to be expected as process value.   | 900     |
| <b>SP2C</b> |  | <b>With active SP.2 no cooling controlling is provided</b>  | 0       |
|             | 0  | standard (cooling permissible with all set-points)  |         |
| 1           | no cooling provided with active SP.2   |   |         |

## Configuration level

| Name         | Value range | Description  | Default |
|--------------|-------------|--|---------|
| <b>CYCL</b>  |             | <b>Characteristic for 2-point- and 3-point-controllers</b>                                       | 0       |
|              | 0           | standard   |         |
|              | 1           | water cooling linear   |         |
|              | 2           | water cooling non-linear   |         |
|              | 3           | with constant cycle  |         |
| <b>tune</b>  |             | <b>Auto-tuning at start-up</b>   | 0       |
|              | 0           | At start-up with step function   |         |
|              | 1           | At start-up with impulse function. Setting for fast controlled systems (e.g. hot runner control) |         |
|              | 2           | Always step attempt during start-up  |         |
| <b>Start</b> |             | <b>Start of auto-tuning</b>  | 0       |
|              | 0           | no automatic start (manual start via front interface)  |         |
|              | 1           | Manual or automatic start of auto-tuning at power on or when oscillating is detected             |         |
| <b>Adt0</b>  |             | <b>Optimization of T1, T2 (only visible with BlueControl!)</b>                                   | 0       |
|              | 0           | Automatic optimization   |         |
|              | 1           | No optimization  |         |

## Input

| Name         | Value range | Description  | Default |
|--------------|-------------|--|---------|
| <b>SEYP</b>  |             | <b>Sensor type selection</b>   | 1       |
|              | 0           | thermocouple type L (-100...900°C), Fe-CuNi DIN  |         |
|              | 1           | thermocouple type J (-100...1200°C), Fe-CuNi   |         |
|              | 2           | thermocouple type K (-100...1350°C), NiCr-Ni   |         |
|              | 3           | thermocouple type N (-100...1300°C), Nicrosil-Nisil  |         |
|              | 4           | thermocouple type S (0...1760°C), PtRh-Pt10%   |         |
|              | 5           | thermocouple type R (0...1760°C), PtRh-Pt13%   |         |
|              | 20          | Pt100 (-200.0 ... 100.0 °C)  |         |
|              | 21          | Pt100 (-200.0 ... 850.0 °C)  |         |
|              | 22          | Pt1000 (-200.0 ... 850.0 °C)   |         |
|              | 23          | special 0...4500 Ohm (pre-defined as KTY11-6)  |         |
|              | 30          | 0...20mA / 4...20mA<br>Scaling is required. (see chp.5.3 page 51)  |         |
|              | 40          | 0...10V / 2...10V<br>Scaling is required. (see chp. 5.3 page 51)   |         |
| <b>SL in</b> |             | <b>Linearization (only at SEYP = 23 (KTY 11-6), (0..20mA) and 40 (0..10V) adjustable)</b>  | 30      |
|              | 0           | none   |         |
|              | 1           | Linearization to specification. Creation of linearization table with BlueControl (engineering tool) possible. The characteristic for KTY 11-6 temperature sensors is preset. |         |
| <b>Corr</b>  |             | <b>Measured value correction / scaling</b>   | 0       |
|              | 0           | Without scaling  |         |
|              | 1           | Offset correction (at <b>CR1</b> level)  |         |
|              | 2           | 2-point correction (at <b>CR1</b> level)   |         |
|              | 3           | Scaling (at <b>PRR1</b> level)   |         |

| Name | Value range | Description  | Default |
|------|-------------|--|---------|
| fAI1 |             | <b>Forcing INP1 (only visible with BlueControl!)</b> | 0       |
|      | 0           | No forcing   |         |
|      | 1           | Forcing via serial interface                         |         |

## INP.2

| Name  | Value range | Description  | Default |
|-------|-------------|--|---------|
| I.Fnc |             | <b>Function selection of INP2</b>                                  | 1       |
|       | 0           | no function (subsequent input data are skipped)                    |         |
|       | 1           | heating current input  |         |
|       | 2           | external set-point (SPE)   |         |
|       | 5           | default correcting variable Y.E (switchover -> LOG1 / YE)          |         |
| SEYP  |             | <b>Sensor type selection</b>                                       | 31      |
|       | 30          | 0...20mA / 4...20mA<br>Scaling is required. (see chp. 5.3 page 51) |         |
|       | 31          | 0...50mA AC<br>Scaling is required. (see chp.5.3 page51)           |         |
| fAI2  |             | <b>Forcing INP2 (only visible with BlueControl!)</b>               | 0       |
|       | 0           | No forcing   |         |
|       | 1           | Forcing via serial interface                                       |         |

## Liā

| Name                    | Value range  | Description   | Default |
|-------------------------|--|---|---------|
| Fnc.1<br>Fnc.2<br>Fnc.3 |  | <b>Function of limit 1/2/3</b>  | 1       |
|                         | 0  | switched off  |         |
|                         | 1  | measured value monitoring   |         |
|                         | 2  | Measured value monitoring + alarm status storage. A stored limit value can be reset via error list, [F]-key, [E]-key or a digital input (-> LOG1 / Error) |         |
| Src.1<br>Src.2<br>Src.3 |  | <b>Source of Limit 1/2/3</b>  | 1       |
|                         | 0  | process value   |         |
|                         | 1  | control deviation xw (process value - set-point)  |         |
|                         | 2  | control deviation xw (with suppression after start-up and set-point change)   |         |
|                         | 6  | effective setpoint W <sub>eff</sub>   |         |
|                         | 7  | correcting variable y (controller output)   |         |
|                         | 8  | control variable deviation xw (actual value - internal setpoint) = deviation alarm to internal setpoint   |         |
| 11                      | Control deviation Xw (=relative alarm) with suppression after start-up or set-point change without time limit. |   |         |
| HEAL                    |  | <b>Alarm heat current function (INP2)</b>   | 0       |
|                         | 0  | switched off  |         |
|                         | 1  | Overload short circuit monitoring   |         |
|                         | 2  | Break and short circuit monitoring  |         |
| LPAL                    |  | <b>Monitoring of control loop interruption for heating</b>  | 0       |
|                         | 0  | switched off / inactive   |         |
|                         | 1  | active<br>If $t_{i=0}$ LOOP alarm is inactive!  |         |

## Configuration level

| Name | Value range | Description   | Default |
|------|-------------|---|---------|
| Hour | OFF..999999 | <b>Operating hours</b> (only visible with BlueControl!)         | OFF     |
| Swit | OFF..999999 | <b>Output switching cycles</b> (only visible with BlueControl!) | OFF     |

### Out.1

| Name              | Value range | Description  | Default |
|-------------------|-------------|--|---------|
| OAct              |             | <b>Method of operation of output OUT1</b>            | 0       |
|                   | 0           | direct / normally open                               |         |
|                   | 1           | inverse / normally closed                            |         |
| Y.1<br>Y.2        |             | <b>Controller output Y1/Y2</b>                       | 1       |
|                   | 0           | not active   |         |
|                   | 1           | active   |         |
| L.1<br>L.2<br>L.3 |             | <b>Limit 1/2/3 signal</b>                            | 0       |
|                   | 0           | not active   |         |
|                   | 1           | active   |         |
| LPAL              |             | <b>Interruption alarm signal (LOOP)</b>              | 0       |
|                   | 0           | not active   |         |
|                   | 1           | active   |         |
| HCAL              |             | <b>Heat current alarm signal</b>                     | 0       |
|                   | 0           | not active   |         |
|                   | 1           | active   |         |
| HCS               |             | <b>Solid state relay (SSR) short circuit signal</b>  | 0       |
|                   | 0           | not active   |         |
|                   | 1           | active   |         |
| PEnd              |             | <b>Programmer end signal</b>                         | 0       |
|                   | 0           | not active   |         |
|                   | 1           | active   |         |
| FA.1<br>FA.2      |             | <b>INP1/ INP2 error signal</b>                       | 0       |
|                   | 0           | not active   |         |
|                   | 1           | active   |         |
| fOut              |             | <b>Forcing OUT1</b> (only visible with BlueControl!) | 0       |
|                   | 0           | No forcing   |         |
|                   | 1           | Forcing via serial interface                         |         |

### Out.2

Configuration parameters **Out.2** as **Out.1** except for: Default **Y.1** = 0, **Y.2** = 1

### Out.3

| Name | Value range | Description  | Default |
|------|-------------|--|---------|
| OETP |             | <b>Signal type selection OUT3</b>                                | 0       |
|      | 0           | relay / logic (only visible with current/logic voltage)          |         |
|      | 1           | 0 ... 20 mA continuous (only visible with current/logic/voltage) |         |
|      | 2           | 4 ... 20 mA continuous (only visible with current/logic/voltage) |         |
|      | 3           | 0...10 V continuous (only visible with current/logic/voltage)    |         |
|      | 4           | 2...10 V continuous (only visible with current/logic/voltage)    |         |



| Name                 | Value range  | Description  | Default |
|----------------------|--------------|--|---------|
|                      | 5            | transmitter supply (only visible without OPTION)   |         |
| OAct                 |              | <b>Method of operation of output OUT3 (only visible when O.TYP=0)</b>                    | 1       |
|                      | 0            | direct / normally open   |         |
|                      | 1            | inverse / normally closed  |         |
| Y1<br>Y2             |              | <b>Controller output Y1/Y2 (only visible when O.TYP=0)</b>                               | 0       |
|                      | 0            | not active   |         |
|                      | 1            | active   |         |
| Lim1<br>Lim2<br>Lim3 |              | <b>Limit 1/2/3 signal (only visible when O.TYP=0)</b>                                    | 1       |
|                      | 0            | not active   |         |
|                      | 1            | active   |         |
| LPAL                 |              | <b>Interruption alarm signal (LOOP) (only visible when O.TYP=0)</b>                      | 0       |
|                      | 0            | not active   |         |
|                      | 1            | active   |         |
| HCAL                 |              | <b>Heating current alarm signal (only visible when O.TYP=0)</b>                          | 0       |
|                      | 0            | not active   |         |
|                      | 1            | active   |         |
| HCSL                 |              | <b>Solid state relay (SSR) short circuit signal (only visible when O.TYP=0)</b>          | 0       |
|                      | 0            | not active   |         |
|                      | 1            | active   |         |
| PEnd                 |              | <b>Programmer end signal (only visible when O.TYP=0)</b>                                 | 0       |
|                      | 0            | not active   |         |
|                      | 1            | active   |         |
| FR11<br>FR12         |              | <b>INP1/INP2 error (only visible when O.TYP=0)</b>                                       | 1       |
|                      | 0            | not active   |         |
|                      | 1            | active   |         |
| Out0                 | -1999...9999 | <b>Scaling of the analog output for 0% (0/4mA or 0/2V, only visible when O.TYP=1..5)</b> | 0       |
| Out1                 | -1999...9999 | <b>Scaling of the analog output for 100% (20mA or 10V, only visible when O.TYP=1..5)</b> | 100     |
| Osrc                 |              | <b>Signal source of the analog output OUT3 (only visible when O.TYP=1..5)</b>            | 1       |
|                      | 0            | not used   |         |
|                      | 1            | controller output y1 (continuous)  |         |
|                      | 2            | controller output y2 (continuous)  |         |
|                      | 3            | process value  |         |
|                      | 4            | effective set-point Weff   |         |
|                      | 5            | control deviation xw (process value - set-point)   |         |
| 6                    | No function  |  |         |
| fOut                 |              | <b>Forcing OUT3 (only visible with BlueControl!)</b>                                     | 0       |
|                      | 0            | No forcing   |         |
|                      | 1            | Forcing via serial interface   |         |

### Out5/Out6










Configuration parameters Out5 as Out1 except for: Default Y1 = 0, Y2 = 0











#### Method of operation and usage of output Out1 to Out6:

Is more than one signal chosen active as source, those signals are OR-linked.

## LOG1

| Name | Value range  | Description  | Default                                    |
|------|--|--|--|
| L r  |  | <b>Local / Remote switching (Remote: adjusting of all values by front keys is blocked)</b>       | 0  |
|      | 0  | no function (switch-over via interface is possible)  |  |
|      | 1  | active   |  |
|      | 2  | DI1  |  |
|      | 3  | DI2 (only visible with OPTION)   |  |
|      | 4  | DI3 (only visible with OPTION)   |  |
|      | 5  |  - key          |  |
| SP.2 |  | <b>Switching to second setpoint SP.2</b>   | 0  |
|      | 0  | no function (switch-over via interface is possible)  |  |
|      | 2  | DI1  |  |
|      | 3  | DI2 (only visible with OPTION)   |  |
|      | 4  | DI3 (only visible with OPTION)   |  |
|      | 5  |  - key          |  |
|      | SP.E   |  | <b>Switching to external setpoint SP.E</b> |
| 0    |  | no function (switch-over via interface is possible)  |  |
| 1    |  | active   |  |
| 2    |  | DI1  |  |
| 3    |  | DI2 (only visible with OPTION)   |  |
| 4    |  | DI3 (only visible with OPTION)   |  |
| 5    |  |  - key        |  |
| Y2   |  | <b>Y/Y2 switching</b>  | 0  |
|      | 0  | no function (switch-over via interface is possible)  |  |
|      | 2  | DI1  |  |
|      | 3  | DI2 (only visible with OPTION)   |  |
|      | 4  | DI3 (only visible with OPTION)   |  |
|      | 5  |  - key        |  |
|      | 6  |  - key        |  |
| YE   |  | <b>YE switch-over</b>  | 0  |
|      | 0  | No function (switch-over via interface is possible)  |  |
|      | 1  | always active  |  |
|      | 2  | DI1 switches   |  |
|      | 3  | DI2 switches (only visible with OPTION)  |  |
|      | 4  | DI3 switches (only visible with OPTION)  |  |
|      | 5  |  key switches |  |
| 6    |  key switches |  |  |
| nRn  |  | <b>Automatic/manual switching</b>  | 0  |
|      | 0  | no function (switch-over via interface is possible)  |  |
|      | 1  | always activated (manual station)  |  |
|      | 2  | DI1  |  |
|      | 3  | DI2 (only visible with OPTION)   |  |
|      | 4  | DI3 (only visible with OPTION)   |  |
|      | 5  |  - key        |  |
| 6    |  - key        |  |  |

| Name         | Value range | Description   | Default |
|--------------|-------------|---|---------|
| <b>COFF</b>  |             | <b>Switching off the controller</b>   | 0       |
|              | 0           | no function (switch-over via interface is possible)   |         |
|              | 2           | DI1   |         |
|              | 3           | DI2 (only visible with OPTION)  |         |
|              | 4           | DI3 (only visible with OPTION)  |         |
|              | 5           |  - key     |         |
|              | 6           |  - key     |         |
| <b>Block</b> |             | <b>Blockage of hand function</b>  | 0       |
|              | 0           | no function (switch-over via interface is possible)   |         |
|              | 2           | DI1   |         |
|              | 3           | DI2 (only visible with OPTION)  |         |
|              | 4           | DI3 (only visible with OPTION)  |         |
|              | 5           |  - key     |         |
| <b>Errr</b>  |             | <b>Reset of all error list entries</b>  | 0       |
|              | 0           | no function (switch-over via interface is possible)   |         |
|              | 2           | DI1   |         |
|              | 3           | DI2 (only visible with OPTION)  |         |
|              | 4           | DI3 (only visible with OPTION)  |         |
|              | 5           |  - key     |         |
|              | 6           |  - key     |         |
| <b>boost</b> |             | <b>Boost function: setpoint increases by 5 P.b<sub>0</sub> for the time t.b<sub>0</sub></b> | 0       |
|              | 0           | no function (switch-over via interface is possible)   |         |
|              | 2           | DI1   |         |
|              | 3           | DI2 (only visible with OPTION)  |         |
|              | 4           | DI3 (only visible with OPTION)  |         |
|              | 5           |  - key   |         |
| <b>Prd2</b>  |             | <b>Switching of parameter set (Pb, ti, td)</b>  | 0       |
|              | 0           | no function (switch-over via interface is possible)   |         |
|              | 2           | DI1   |         |
|              | 3           | DI2 (only visible with OPTION)  |         |
|              | 4           | DI3 (only visible with OPTION)  |         |
|              | 5           |  - key |         |
| <b>Prun</b>  |             | <b>Programmer Run/Stop (see page 55)</b>  | 0       |
|              | 0           | no function (switch-over via interface is possible)   |         |
|              | 2           | DI1   |         |
|              | 3           | DI2 (only visible with OPTION)  |         |
|              | 4           | DI3 (only visible with OPTION)  |         |
|              | 5           |  - key |         |
| <b>dfn</b>   |             | <b>Function of digital inputs (valid for all inputs)</b>                                    | 0       |
|              | 0           | direct  |         |
|              | 1           | inverse   |         |
|              | 2           | toggle key function   |         |
| fDI1         |             | <b>Forcing di1/ di2 / di3 (only visible with BlueControl!)</b>                              | 0       |
| fDI2         | 0           | No forcing  |         |
| fDI3         | 1           | Forcing via serial interface  |         |

o b t h r

| Name | Value range      | Description   | Default |
|------|------------------|---|---------|
| bAud |                  | <b>Baudrate of the interface (only visible with OPTION)</b>           | 2       |
|      | 0                | 2400 Baud   |         |
|      | 1                | 4800 Baud   |         |
|      | 2                | 9600 Baud   |         |
|      | 3                | 19200 Baud  |         |
| Addr | 1...247          | <b>Address on the interace (only visible with OPTION)</b>             | 1       |
| Prty |                  | <b>Data parity on the interface (only visible with OPTION)</b>        | 1       |
|      | 0                | no parity (2 stop bits)   |         |
|      | 1                | even parity   |         |
|      | 2                | odd parity  |         |
| dELY | 0...200          | <b>Delay of response signal [ms] (only visible with OPTION)</b>       | 0       |
| Unit |                  | <b>Unit</b>   | 1       |
|      | 0                | without unit  |         |
|      | 1                | °C  |         |
|      | 2                | °F  |         |
| dP   |                  | <b>Decimal point (max. number of digits behind the decimal point)</b> | 0       |
|      | 0                | no digit behind the decimal point                                     |         |
|      | 1                | 1 digit behind the decimal point                                      |         |
|      | 2                | 2 digits behind the decimal point                                     |         |
|      | 3                | 3 digits behind the decimal point                                     |         |
| LEd  |                  | <b>Function allocation of the status LEDs1 / 2 / 3</b>                | 0       |
|      | 0                | OUT1, OUT2, OUT3  |         |
|      | 1                | Heating, Alarm 2, Alarm 3   |         |
|      | 2                | Heating, Cooling, Alarm 3   |         |
| EdEL | 0..200           | <b>Modem delay [ms]</b>   | 0       |
| FrEq |                  | <b>Switching 50 Hz / 60 Hz (only visible with BlueControl!)</b>       | 0       |
|      | 0                | 50 Hz   |         |
|      | 1                | 60 Hz   |         |
| MASt |                  | <b>Modbus Master / Slave (only visible with BlueControl®!)</b>        | 0       |
|      | 0                | No  |         |
|      | 1                | Yes   |         |
| Cycl | 0 ... 240        | <b>Mastercycle (sec.) (only visible with BlueControl®!)</b>           | 120     |
| Adr0 | -32768 ... 32767 | <b>Destination address (only visible with BlueControl®!)</b>          | 1100    |
| AdrU | -32768 ... 32767 | <b>Source address (only visible with BlueControl®!)</b>               | 1100    |
| Numb | 0 ... 100        | <b>Number of data (only visible with BlueControl®!)</b>               | 1       |
| ICof |                  | <b>Block controller off (only visible with BlueControl!)</b>          | 0       |
|      | 0                | Released  |         |
|      | 1                | Blocked   |         |

| Name   | Value range | Description  | Default |
|--------|-------------|--|---------|
| IAda   |             | <b>Block auto tuning</b> (only visible with BlueControl!)              | 0       |
|        | 0           | Released   |         |
|        | 1           | Blocked  |         |
| IExo   |             | <b>Block extended operating level</b> (only visible with BlueControl!) | 0       |
|        | 0           | Released   |         |
|        | 1           | Blocked  |         |
| ILat   |             | Suppression error storage (only visible with BlueControl®!)            | 0       |
|        | 0           | No   |         |
|        | 1           | Yes  |         |
| Pass   | OFF...9999  | <b>Password</b> (only visible with BlueControl!)                       | OFF     |
| IPar   |             | <b>Block parameter level</b> (only visible with BlueControl!)          | 1       |
|        | 0           | Released   |         |
|        | 1           | Blocked  |         |
| ICnf   |             | <b>Block configuration level</b> (only visible with BlueControl!)      | 1       |
|        | 0           | Released   |         |
|        | 1           | Block  |         |
| ICal   |             | <b>Block calibration level</b> (only visible with BlueControl!)        | 1       |
|        | 0           | Released   |         |
|        | 1           | Blocked  |         |
| F.Coff |             | Switch-off behaviour (only visible with BlueControl®!)                 | 0       |
|        | 0           | PID - controller functions off   |         |
|        | 1           | All functions off  |         |
| D2.Err |             | Error displayed in display 2 (only visible with BlueControl®!)         | 0       |
|        | 0           | No reaction to errors  |         |
|        | 1           | Blinking error display   |         |

 Resetting the controller configuration to factory setting (Default)  
→ **chapter 12.1 (page 68)**


 **BlueControl - the engineering tool for the BluePort® controller series**

For facilitating configuration and parameter setting of the KS50/52-1 an engineering tool with different functionality levels is available (see chapter 10: *Accessory equipment with ordering information*).

In addition to configuration and parameter setting, BlueControl® is used for data acquisition and offers long-term storage and print functions. BlueControl® is connected to KS50/52-1 via the front-panel interface "BluePort " by means of PC (Windows 95/ 98/ NT4/ 2000/ XP) and a PC adaptor.  
Description BlueControl®: see chapter 9: *BlueControl* (page 60)

### 4.3 Set-point processing

The set-point processing structure is shown in the following picture:

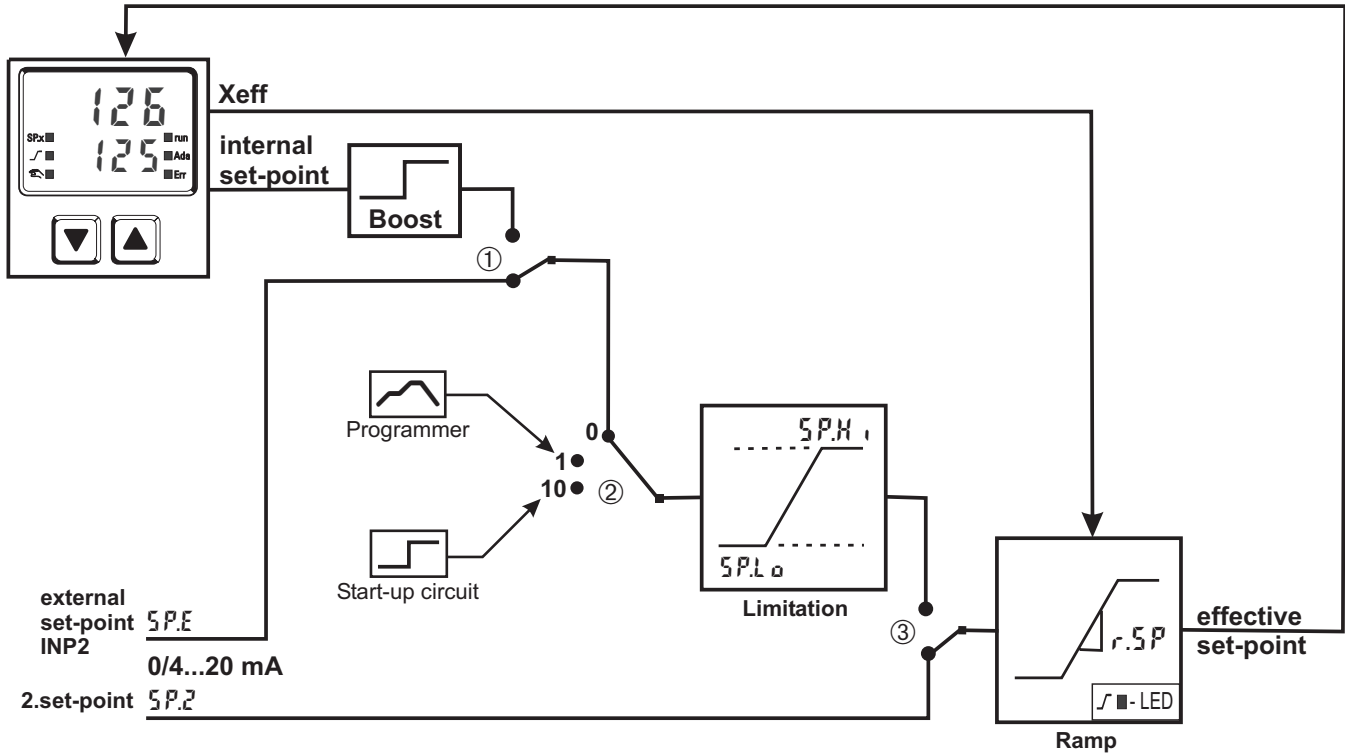

**Index:**

- ① : int/ext-setpoint switching
- ② : configuration  $SP.F_n$
- ③ :  $SP / SP.2$  switching

**The ramp starts at process value with the following switchings:**

- int / ext-setpoint switching
- $SP / SP.2$  switching
- Manual-/ Automatic switching
- at power on

#### 4.3.1 Set-point gradient / ramp

To prevent set-point step changes, parameter  $r.SP$  can be adjusted to a maximum rate of change. This gradient is effective in positive and negative direction..

With parameter  $r.SP$  set to **OFF** (default), the gradient is switched off and set-point changes are realized directly.  
(for parameter: see page )


### 4.4 KS50-1 cooling functions

With KS50-1, configuration parameter  $CYCL$  ( $CONF/ENTER/CYCL$ ) can be used for matching the cycle time of 2-point and 3-point controllers. This can be done using the following 4 methods.

#### 4.4.1 Standard ( $CYCL = 0$ )

The adjusted cycle times  $t_1$  and  $t_2$  are valid for 50% or -50% correcting variable. With very small or very high values, the effective cycle time is extended to

prevent unreasonably short on and off pulses. The shortest pulses result from  $\frac{1}{4} \times t_1$  or  $\frac{1}{4} \times t_2$ . The characteristic curve is also called “bath tub curve”.

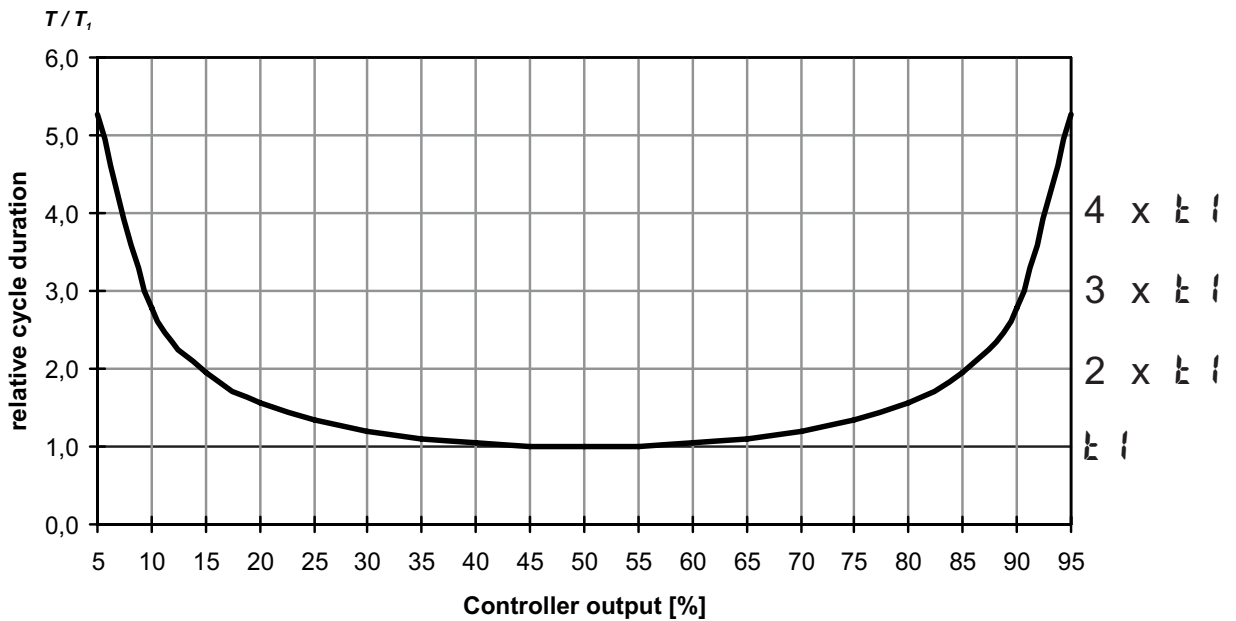

**Parameters to be adjusted:**  $t_1$  : min. cycle time 1 (heating) [s]  
 (PARA/ENTER)  $t_2$  : min. cycle time 2 (cooling) [s]

#### 4.4.2 Switching attitude linear (CYCL = 1)


For heating (Y1), the standard method (see chapter 4.4.1) is used. For cooling (Y2), a special algorithm for cooling with water is used. Generally, cooling is enabled only at an adjustable process temperature (EM20), because low temperatures prevent evaporation with related cooling, whereby damage to the plant is avoided. The cooling pulse length is adjustable using parameter t.on and is fixed for all output values.

The “off” time is varied dependent of output value. Parameter t.off is used for determining the min “off” time. For output of a shorter off pulse, this pulse is suppressed, i.e. the max. effective cooling output value is calculated according to formula  $t.on / (t.on + t.off) \cdot 100\%$ .


**Parameters to be adjusted:** EM20: minimum temperature for water cooling  
 (PARA/ENTER) t.on: pulse duration water cooling  
 t.off: minimum pause water cooling

#### 4.4.3 Switching attitude non-linear (CYCL = 2)

With this method, the cooling power is normally much higher than the heating power, i.e. the effect on the behaviour during transition from heating to cooling may be negative. The cooling curve ensures that the control intervention with 0 to -70% correcting variable is

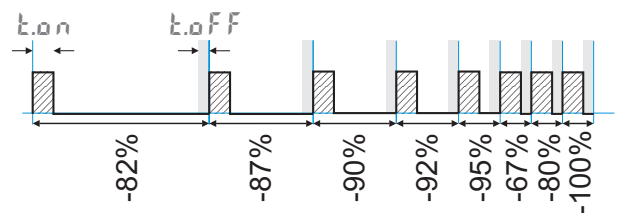


very weak. Moreover, the correcting variable increases very quickly to max. possible cooling. Parameter  $F.HZD$  can be used for changing the characteristic curve. The standard method (see section 4.4.1) is also used for heating. Cooling is also enabled dependent of process temperature .

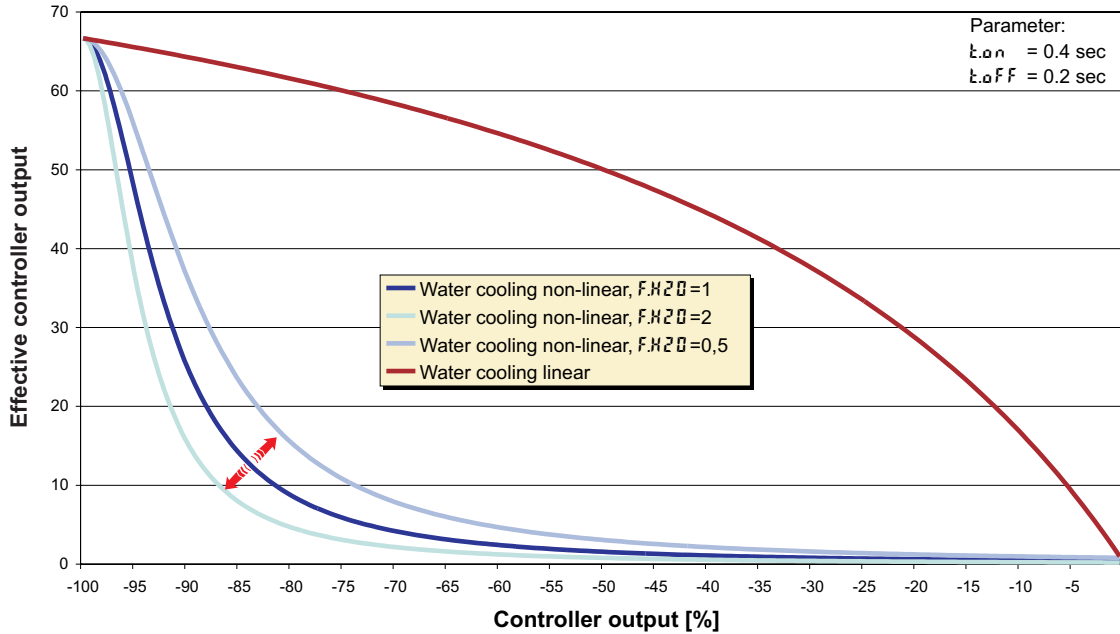

**Parameters to be adjusted:**  $F.HZD$ : min. temperature for water cooling  
 (  $PARA / ENER$  )  $t.on$ : Pulse duration water cooling  
 $t.off$ : min. pause water cooling  
 $F.HZD$ : adaptation of (non-linear) characteristic Water cooling

### 4.4.4 Heating and cooling with constant period ( $CYCL = 3$ )

The adjusted cycle times  $t_1$  and  $t_2$  are met in the overall output range . To prevent unreasonably short pulses, parameter  $t_P$  is used for adjusting the shortest pulse duration. With small correcting values which require a pulse shorter than the value adjusted in  $t_P$ , this pulse is suppressed. However, the controller stores the pulse and totalizes further pulses, until a pulse of duration  $t_P$  can be output.

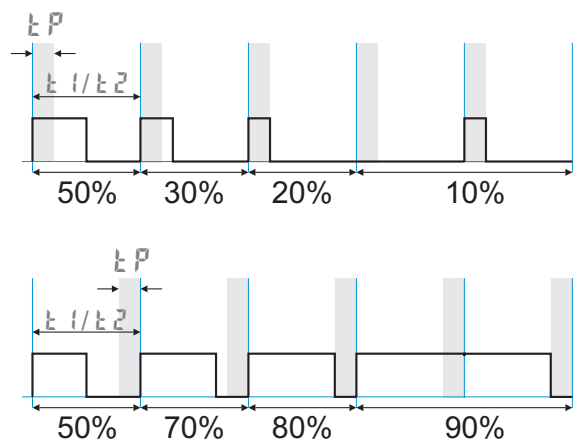


**Parameters to be adjusted:**  $t_1$ : Min. cycle time 1 (heating) [s]  
 (  $PARA / ENER$  )  $t_2$ : min. cycle time 2 (cooling) [s]  
 $t_P$ : min. pulse length [s]




## 4.5 Configuration examples

### 4.5.1 On-Off controller / Signaller (inverse)

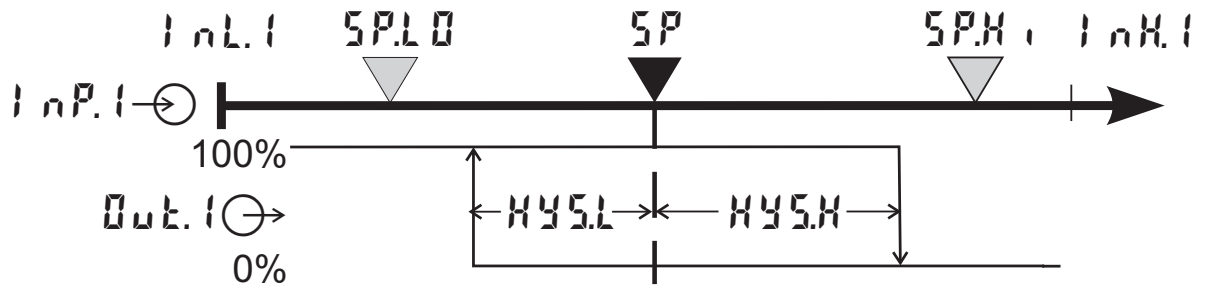


|               |        |                |  |
|---------------|--------|----------------|--|
| ConF / Entr:  | SPFn   | = 0            | set-point / cascade controller                       |
|               | CFnc   | = 0            | signaller with one output                            |
|               | CAct   | = 0            | inverse output action<br>(e.g. heating applications) |
| ConF / Out.1: | OAct   | = 0            | output action <i>Out.1</i> direct                    |
|               | Y1     | = 1            | control output Y1 active                             |
| PARA / Entr:  | HYS.L  | = 0...9999     | switching difference below <i>SP</i>                 |
| PARA / Entr:  | HYS.H  | = 0...9999     | switching difference above <i>SP</i>                 |
| PARA / SetP:  | SP.L0  | = -1999...9999 | lower set-point limit for Weff                       |
|               | SP.H.1 | = -1999...9999 | upper set-point limit for Weff                       |

**i** For direct signaller action, the controller action must be changed  
(ConF / Entr / CAct = 1)

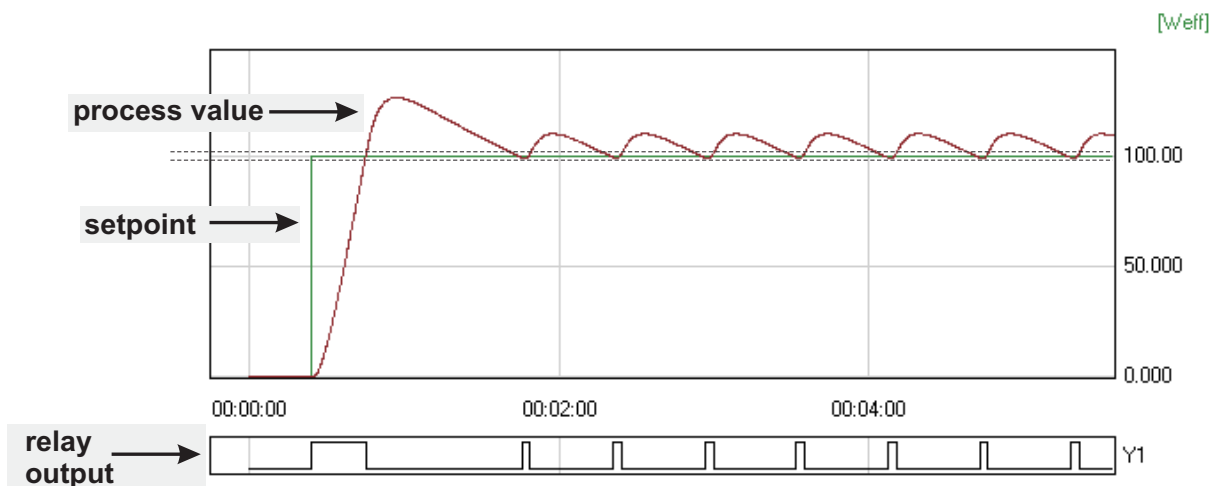


4.5.2 2-point and continuous controller (inverse)

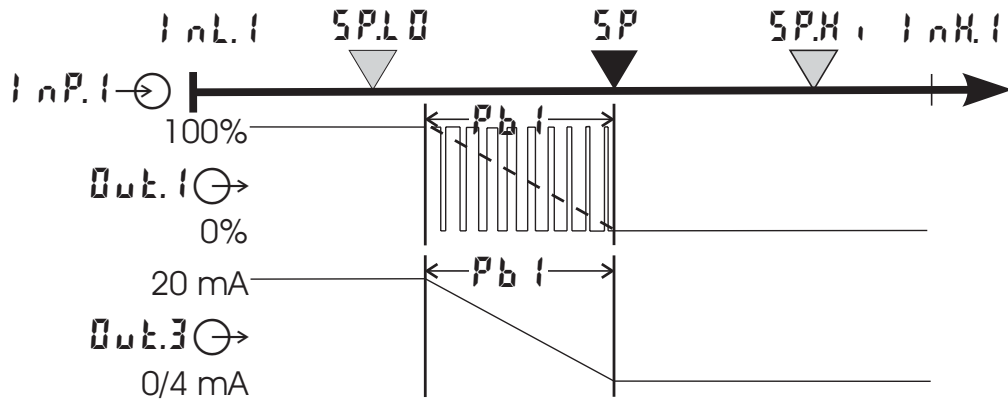


|             |           |                |   |
|-------------|-----------|----------------|---|
| CONF/ENTR   | SPFn      | = 0            | set-point / cascade controller                |
|             | CFnc      | = 1            | 2-point and continuous controller (PID)       |
|             | CAct      | = 0            | inverse action<br>(e.g. heating applications) |
| CONF/OUT.1: | ORct      | = 0            | action OUT.1 direct                           |
|             | Y1        | = 1            | control output Y1 active                      |
| CONF/OUT.3: | OUTYP     | = 1/2          | OUT.3 Type (0/4 ... 20mA)                     |
|             | OUT0      | = -1999...9999 | scaling analog output 0/4mA                   |
|             | OUT1      | = -1999...9999 | scaling analog output 20mA                    |
|             | OSrc      | = 1            | controller output y1 (continuous)             |
|             | PRR/ENTR: | Pb1            | = 1...9999                                    |
| PRR/SETP:   | t11       | = 0,1...9999   | integral time 1 (heating) in sec.             |
|             | td1       | = 0,1...9999   | derivative time 1 (heating) in sec.           |
|             | t1        | = 0,4...9999   | min. cycle time 1 (heating)                   |
| PRR/SETP:   | SP.L0     | = -1999...999  | set-point limit low for Weff                  |
|             | SP.H1     | = -1999...9999 | set-point limit high for Weff                 |

**i** For direct action, the controller action must be changed (CONF / ENTR / CAct = 1).

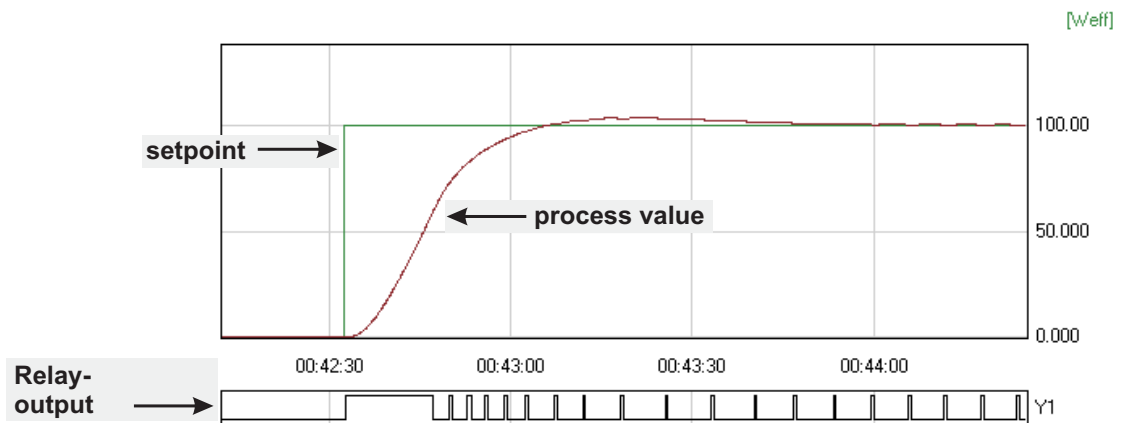


### 4.5.3 3-point and continuous controller

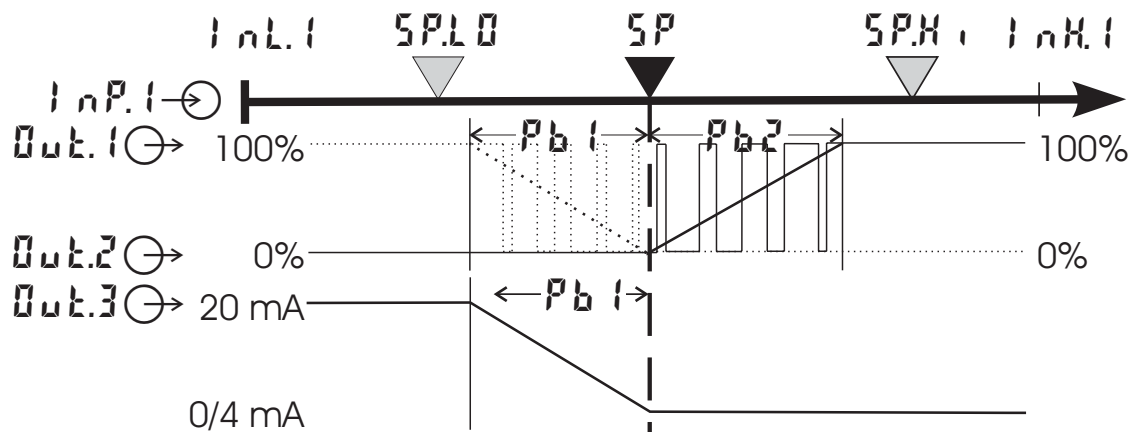

|                            |                    |                             |   |
|----------------------------|--------------------|-----------------------------|---|
| <code>CONF / ENTR:</code>  | <code>SPFn</code>  | <code>= 0</code>            | set-point / cascade controller  |
|                            | <code>CFnc</code>  | <code>= 3</code>            | 3-point controller (2xPID)  |
|                            | <code>CAct</code>  | <code>= 0</code>            | action inverse<br>(e.g. heating applications)                         |
| <code>CONF / Out.1:</code> | <code>ORAct</code> | <code>= 0</code>            | action <code>Out.1</code> direct                                      |
|                            | <code>y.1</code>   | <code>= 1</code>            | control output Y1 active  |
|                            | <code>y.2</code>   | <code>= 0</code>            | control output Y2 not active  |
| <code>CONF / Out.2:</code> | <code>ORAct</code> | <code>= 0</code>            | action <code>Out.2</code> direct                                      |
|                            | <code>y.1</code>   | <code>= 0</code>            | control output Y1 not active  |
|                            | <code>y.2</code>   | <code>= 1</code>            | control output Y2 active  |
| <code>CONF / Out.3:</code> | <code>OutYP</code> | <code>= 1 / 2</code>        | 0 ... 20 mA continuous. / 4 ... 20 mA                                 |
|                            | <code>Out.0</code> | <code>= 0</code>            | scaling 0 %   |
|                            | <code>Out.1</code> | <code>= 100</code>          | scaling 100 %   |
|                            | <code>OSrc</code>  | <code>= 1</code>            | controller output y1 (continuous)                                     |
| <code>PARA / ENTR:</code>  | <code>Pb1</code>   | <code>= 0,1...9999</code>   | proportional band 1 (heating)<br>in units of phys. quantity (e.g. °C) |
|                            | <code>Pb2</code>   | <code>= 0,1...9999</code>   | proportional band 2 (cooling)<br>in units of phys. quantity (e.g. °C) |
|                            | <code>t.1</code>   | <code>= 1...9999</code>     | integral time 1 (heating) in sec.                                     |
|                            | <code>t.2</code>   | <code>= 1...9999</code>     | derivative time 2 (cooling) in sec.                                   |
|                            | <code>td1</code>   | <code>= 1...9999</code>     | integral time 1 (heating) in sec.                                     |
|                            | <code>td2</code>   | <code>= 1...9999</code>     | derivative time 2 (cooling) in sec.                                   |
|                            | <code>t1</code>    | <code>= 0,4...9999</code>   | min. cycle time 1 (heating)   |
|                            | <code>t2</code>    | <code>= 0,4...9999</code>   | min. cycle time 2 (cooling)   |
|                            | <code>SH</code>    | <code>= 0...9999</code>     | neutr. zone in units of phys.quantity                                 |
| <code>PARA / SEtP:</code>  | <code>SP.L0</code> | <code>= -1999...9999</code> | set-point limit low for Weff  |
|                            | <code>SP.H1</code> | <code>= -1999...9999</code> | set-point limit high for Weff   |


4.5.4 3-point stepping controller (relay & relay)

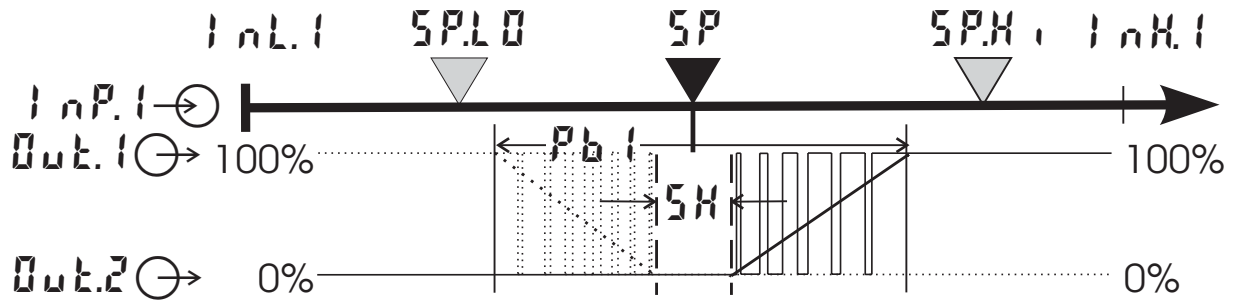

|                       |                              |   |
|-----------------------|------------------------------|---|
| <b>CONF / CONTR:</b>  | <b>SPFn</b> = 0              | set-point / cascade controller  |
|                       | <b>CFnc</b> = 4              | 3-point stepping controller   |
|                       | <b>CAct</b> = 0              | inverse action<br>(e.g. heating applications)                         |
| <b>CONF / OUT.1:</b>  | <b>CAct</b> = 0              | action <b>Out.1</b> direct  |
|                       | <b>y.1</b> = 1               | control output Y1 active  |
|                       | <b>y.2</b> = 0               | control output Y2 not active  |
| <b>CONF / OUT.2:</b>  | <b>CAct</b> = 0              | action <b>Out.2</b> direct  |
|                       | <b>y.1</b> = 0               | control output Y1 not active  |
|                       | <b>y.2</b> = 1               | control output Y2 active  |
| <b>PARAM / CONTR:</b> | <b>Pb.1</b> = 0,1...9999     | proportional band 1 (heating)<br>in units of phys. quantity (e.g. °C) |
|                       | <b>ti.1</b> = 1...9999       | integral time 1 (heating) in sec.                                     |
|                       | <b>td.1</b> = 1...9999       | derivative time 1 (heating) in sec.                                   |
|                       | <b>ti</b> = 0,4...9999       | min. cycle time 1 (heating)   |
|                       | <b>SH</b> = 0...9999         | neutral zone in units of phys. quantity                               |
|                       | <b>tP</b> = 0,1...9999       | min. pulse length in sec.   |
|                       | <b>tt</b> = 3...9999         | actuator travel time in sec.  |
| <b>PARAM / SEtP:</b>  | <b>SP.L0</b> = -1999...9999  | set-point limit low for Weff  |
|                       | <b>SP.H.1</b> = -1999...9999 | set-point limit high for Weff   |


**i** For direct action of the 3-point stepping controller, the controller output action must be changed (**CONF / CONTR / CAct** = 1).

4.5.5  $\Delta Z$  Y - Off controller / 2-point controller with pre-contact

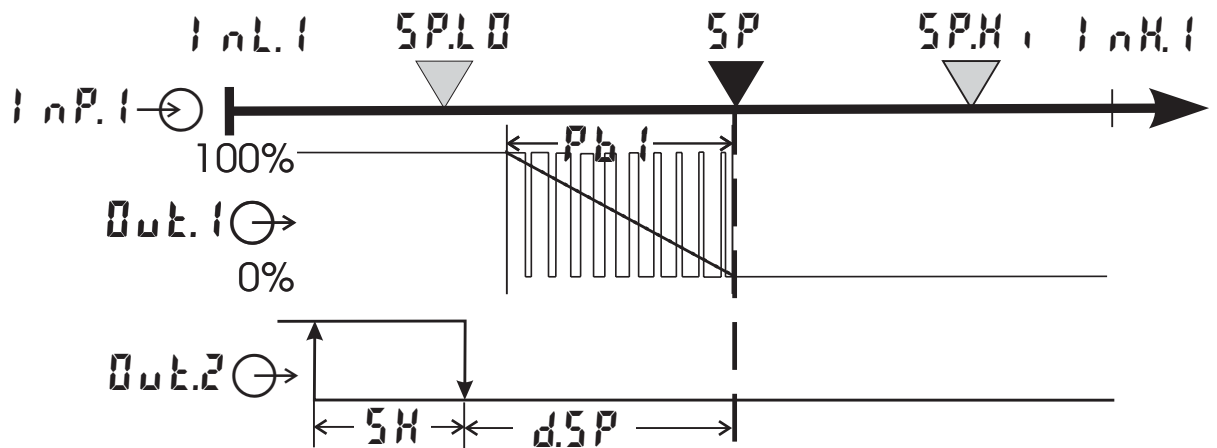


|               |                       |  |
|---------------|-----------------------|--|
| CONF / Contr: | SPFn = 0              | set-point / cascade controller   |
|               | CFnc = 2              | -Y-Off controller  |
|               | CRct = 0              | inverse action<br>(e.g. heating applications)                                |
| CONF / Out.1: | ORct = 0              | action Out.1 direct  |
|               | Y.1 = 1               | control output Y1 active   |
|               | Y.2 = 0               | control output Y2 not active   |
| CONF / Out.2: | ORct = 0              | action Out.2 direct  |
|               | Y.1 = 0               | control output Y1 not active   |
|               | Y.2 = 1               | control output Y2 active   |
| PRrR / Contr: | Pb1 = 0,1...9999      | proportional band 1 (heating)<br>in units of phys. quantity (e.g. °C)        |
|               | t.1 = 1...9999        | integral time 1 (heating) in sec.  |
|               | t.d1 = 1...9999       | derivative time 1 (heating) in sec.  |
|               | t.1 = 0,4...9999      | min. cycle time 1 (heating)  |
|               | SH = 0...9999         | switching difference   |
|               | d.SP = -1999...9999   | trigg. point separation suppl. cont.<br>/ Y / Off in units of phys. quantity |
| PRrR / SEtP:  | SP.L0 = -1999...9999  | set-point limit low for Weff   |
|               | SP.H.1 = -1999...9999 | set-point limit high for Weff  |

4.5.6 KS5\_-1 with measured value output

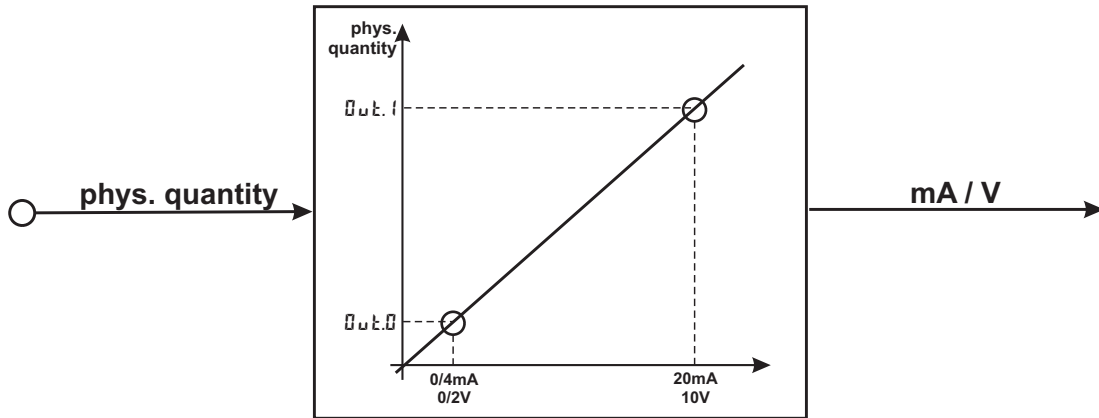

Example: KS5\_-1\_2- 00 \_ \_ \_ \_

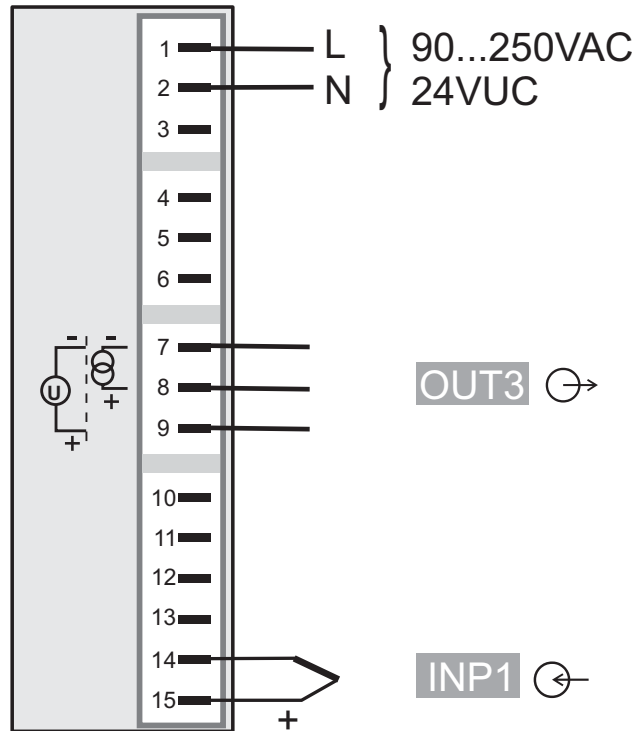



|               |      |                |                            |                     |
|---------------|------|----------------|----------------------------|---------------------|
| Conf / Out.3: | 0k4P | = 1            | Out.3                      | 0...20mA continuous |
|               |      | = 2            | Out.3                      | 4...20mA continuous |
|               |      | = 3            | Out.3                      | 0...10V continuous  |
|               |      | = 4            | Out.3                      | 2...10V continuous  |
| Out.0         |      | = -1999...9999 | scaling Out.3              |                     |
|               |      |                | for 0/4mA or 0/2V          |                     |
| Out.1         |      | = -1999...9999 | scaling Out.3              |                     |
|               |      |                | for 20mA or 10V            |                     |
| 0.5rc         |      | = 3            | signal source for Out.3 is |                     |
|               |      |                | the process value          |                     |

**5** Parameter setting level

**5.1** Parameter survey

| PAR A Parameter setting level |                            |                                  |                 |         |         |                       |     |
|-------------------------------|----------------------------|----------------------------------|-----------------|---------|---------|-----------------------|-----|
| Enter Control and self-tuning | PAR.2 2. set of parameters | SEtP Set-point and process value | Prog Programmer | Input 1 | Input 2 | Limit value functions | End |
| Pb1                           | Pb12                       | SP.Lo                            | b.Lo            | InL.1   | InL.2   | L.1                   |     |
| Pb2                           | Pb22                       | SP.Hi                            | b.Hi            | OutL.1  | OutL.2  | H.1                   |     |
| t.1                           | t.12                       | SP.2                             | SP.01           | InH.1   | InH.2   | HYS.1                 |     |
| t.2                           | t.22                       | r.SP                             | Pt.01           | OutH.1  | OutH.2  | dEL.1                 |     |
| td1                           | td12                       | SP.bo                            | SP.02           | tF.1    |         | L.2                   |     |
| td2                           | td22                       | t.bo                             | Pt.02           |         |         | H.2                   |     |
| t1                            |                            | ySt                              | SP.03           |         |         | HYS.2                 |     |
| t2                            |                            | SP.St                            | Pt.03           |         |         | dEL.2                 |     |
| SH                            |                            | t.St                             | SP.04           |         |         | L.3                   |     |
| HYS.L                         |                            |                                  | Pt.04           |         |         | H.3                   |     |
| HYS.H                         |                            |                                  | SP.05           |         |         | HYS.3                 |     |
| d.SP                          |                            |                                  | Pt.05           |         |         | dEL.3                 |     |
| tP                            |                            |                                  | SP.06           |         |         | HCL.A                 |     |
| tE                            |                            |                                  | Pt.06           |         |         |                       |     |
| y2                            |                            |                                  | SP.07           |         |         |                       |     |
| yLo                           |                            |                                  | Pt.07           |         |         |                       |     |
| yHi                           |                            |                                  | SP.08           |         |         |                       |     |
| y0                            |                            |                                  | Pt.08           |         |         |                       |     |
| yñH                           |                            |                                  | SP.09           |         |         |                       |     |
| L.yñ                          |                            |                                  | Pt.09           |         |         |                       |     |
| EX20                          |                            |                                  | SP.10           |         |         |                       |     |
| t.on                          |                            |                                  | Pt.10           |         |         |                       |     |
| t.oFF                         |                            |                                  |                 |         |         |                       |     |
| FH2o                          |                            |                                  |                 |         |         |                       |     |

**Adjustment:**

To access the parameter level, press the key  for 3 seconds and confirm using the  -key subsequently. If the password function is activated, the prompt for the **PASS** is displayed



- The parameters can be adjusted using the   - keys.

## Parameter setting level

- Press the  $\square$  - key to change to the next parameter.
- After the last parameter of a group, **done** is displayed and followed by automatic changing to the next group



Return to the beginning of a group, by pressing the  $\square$  key for 3 sec.



Unless a key is pressed during 30 seconds, the controller returns to the process value and setpoint display ( Time Out = 30 sec. )



Resetting the configuration parameters to default  
→ chapter 12.1 (page 68)

## 5.2 Parameters

### Ctrl

| Name  | Value range  | Description   | Default |
|-------|--------------|---|---------|
| Pb1   | 1...9999 ①   | Proportional band 1 (heating) in phys. dimensions (e.g. °C)   | 100     |
| Pb2   | 1...9999 ①   | Proportional band 2 (cooling) in phys. dimensions (e.g. °C)   | 100     |
| t11   | 1...9999     | Integral action time 1 (heating) [s]  | 180     |
| t12   | 1...9999     | Integral action time 2 (cooling) [s]  | 180     |
| td1   | 1...9999     | Derivative action time 1 (heating) [s]  | 180     |
| td2   | 1...9999     | Derivative action time 2 (cooling) [s]  | 180     |
| t1    | 0,4...9999   | Minimal cycle time 1 (heating) [s]. The minimum impulse is 1/4 x t1   | 10      |
| t2    | 0,4...9999   | Minimal cycle time 2 (cooling) [s]. The minimum impulse is 1/4 x t2   | 10      |
| SH    | 0...9999     | Neutral zone or switching differential for on-off control [phys. dimensions]                                      | 2       |
| dSP   | -1999...9999 | Trigger point separation for additional contact / Y / Off [phys. dimensions]                                      | 100     |
| tP    | 0,1...9999   | Minimum impulse [s]   | OFF     |
| tE    | 3...9999     | Motor travel time [s]   | 60      |
| Y2    | -120...120   | 2. correcting variable  | 0       |
| YL0   | -120...120   | Lower output limit [%]  | 0       |
| YH1   | -120...120   | Upper output limit [%]  | 100     |
| Y0    | -120...120   | Working point for the correcting variable [%]   | 0       |
| Ym    | -120...120   | Limitation of the mean value Ym [%]   | 5       |
| LYm   | 0...9999     | Max. deviation xw at the start of mean value calculation [phys. dimensions]                                       | 8       |
| EH20  | -1999...9999 | Min. temperature for water cooling. Below the set temperature no water cooling happens.                           | 120     |
| t.on  | 0,1...9999   | Impulse length for water cooling. Fixed for all values of controller output. The pause time is varied.            | 0,1     |
| t.off | 1...9999     | Min. pause time for water cooling. The max. effective controller output results from $t.on / (t.on + t.off)$ 100% | 2       |
| F.H20 | 0,1...9999   | Modification of the (non-linear) water cooling characteristic (see page 39)                                       | 0,5     |

- ① Valid for  $Conf / othr / dP = 0$ . With  $dP = 1 / 2 / 3$  also 0,1 / 0,01 / 0,001 is possible.



## PAr.2

| Name | Value range | Description   | Default |
|------|-------------|---|---------|
| Pb12 | 1...9999 ①  | Proportional band 1 (heating) in phys. dimensions (e.g. °C), 2. parameter set | 100     |
| Pb22 | 1...9999 ①  | Proportional band 2 (cooling) in phys. Dimensions (e.g. °C), 2. parameter set | 100     |
| t122 | 0...9999    | Integral action time 2 (cooling) [s], 2. parameter set                        | 180     |
| t112 | 0...9999    | Integral action time 1 (heating) [s], 2. parameter set                        | 180     |
| td12 | 0...9999    | Derivative action time 1 (heating) [s], 2. parameter set                      | 180     |
| td22 | 0...9999    | Derivative action time 2 (cooling) [s], 2. parameter set                      | 180     |

## SEtP

| Name | Value range  | Description                                | Default |
|------|--------------|--|---------|
| SPLo | -1999...9999 | Set-point limit low for Weff               | 0       |
| SPHi | -1999...9999 | Set-point limit high for Weff              | 900     |
| SP2  | -1999...9999 | Set-point 2.                               | 0       |
| r.SP | 0...9999     | Set-point gradient [/min]                  | OFF     |
| SPbo | -1999...9999 | Boost set-point                            | 30      |
| t.bo | 0...9999     | Boost time                                 | 10      |
| YSt  | -120...120   | Start-up setpoint (see page 56)            | 20      |
| SPSt | -1999...9999 | Set-point for start-up                     | 95      |
| t.St | 0...9999     | Start-up hold time (see page 56)           | 10      |
| SP   | -1999...9999 | Set-point (only visible with BlueControl!) | 0       |



SPLo and SPHi should be between the limits of r.nLH and r.nL see configuration r controller page 29

## PrOG

| Name  | Value range  | Description             | Default |
|-------|--------------|-------------------------|---------|
| SP.01 | -1999...9999 | Segment end set-point 1 | 100 ①   |
| PL.01 | 0...9999     | Segment time 1 [min]    | 10 ②    |
| SP.02 | -1999...9999 | Segment end set-point 2 | 100 ①   |
| PL.02 | 0...9999     | Segment time 2 [min]    | 10 ②    |
| SP.03 | -1999...9999 | Segment end set-point 3 | 200 ①   |
| PL.03 | 0...9999     | Segment time 3 [min]    | 10 ②    |
| SP.04 | -1999...9999 | Segment end set-point 4 | 200 ①   |
| PL.04 | 0...9999     | Segment time 4 [min]    | 10 ②    |

① If SP.01 ... SP.04 = OFF then following parameters are not shown

② If segment end set-point = OFF then the segment time is not visible

### INP.1

| Name  | Value range  | Description                                 | Default |
|-------|--------------|---|---------|
| INL.1 | -1999...9999 | Input value for the lower scaling point     | 0       |
| OUT.1 | -1999...9999 | Displayed value for the lower scaling point | 0       |
| INH.1 | -1999...9999 | Input value for the upper scaling point     | 20      |
| OUH.1 | -1999...9999 | Displayed value for the lower scaling point | 20      |
| TF.1  | -1999...9999 | Filter time constant [s]                    | 0,5     |

### INP.2


| Name  | Value range  | Description                                 | Default |
|-------|--------------|---|---------|
| INL.2 | -1999...9999 | Input value for the lower scaling point     | 0       |
| OUT.2 | -1999...9999 | Displayed value for the lower scaling point | 0       |
| INH.2 | -1999...9999 | Input value for the upper scaling point     | 50      |
| OUH.2 | -1999...9999 | Displayed value for the upper scaling point | 50      |

### LIM

| Name  | Value range  | Description            | Default |
|-------|--------------|------------------------|---------|
| L.1   | -1999...9999 | Lower limit 1          | -10     |
| H.1   | -1999...9999 | Upper limit 1          | 10      |
| HYS.1 | 0...9999     | Hysteresis limit 1     | 1       |
| L.2   | -1999...9999 | Lower limit 2          | OFF     |
| H.2   | -1999...9999 | Upper limit 2          | OFF     |
| HYS.2 | 0...9999     | Hysteresis limit 2     | 1       |
| L.3   | -1999...9999 | Lower limit 3          | OFF     |
| H.3   | -1999...9999 | Upper limit 3          | OFF     |
| HYS.3 | 0...9999     | Hysteresis limit 3     | 1       |
| HCR   | -1999...9999 | Heat current limit [A] | 50      |

### 5.3 Input scaling

When using current or voltage signals as input variables for *I nP.1* or *I nP.2*, scaling of input and display values at parameter setting level is required. Specification of the input value for lower and higher scaling point is in the relevant electrical unit (mA/ V).

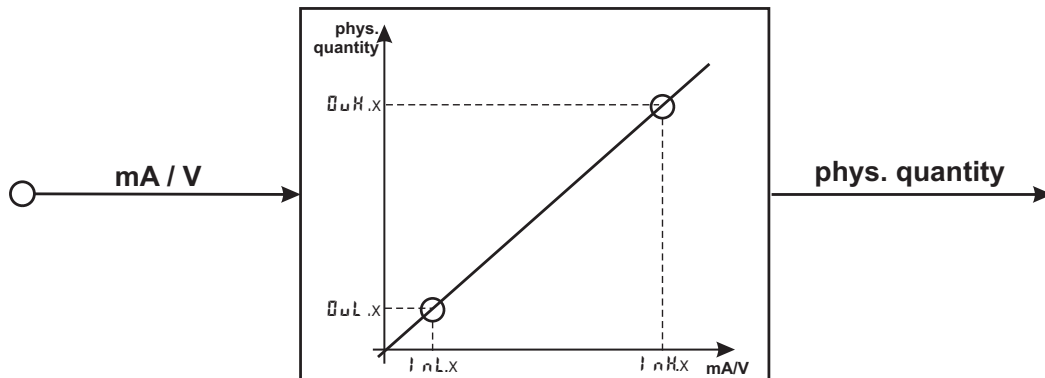

#### 5.3.1 Input *I nP.1*

**i** Parameters *I nL.1*, *Q uL.1*, *I nH.1* and *Q uH.1* are only visible if *CONF / I nP.1 / Corr = 3* is chosen.

| SEYP             | Input signal | <i>I nL.1</i> | <i>Q uL.1</i> | <i>I nH.1</i> | <i>Q uH.1</i> |
|------------------|--------------|---------------|---------------|---------------|---------------|
| 30<br>(0...20mA) | 0 ... 20 mA  | 0             | -1999...9999  | 20            | -1999...9999  |
|                  | 4 ... 20 mA  | 4             | -1999...9999  | 20            | -1999...9999  |
| 40<br>(0...10V)  | 0 ... 10 V   | 0             | -1999...9999  | 10            | -1999...9999  |
|                  | 2 ... 10 V   | 2             | -1999...9999  | 10            | -1999...9999  |

In addition to these settings, *I nL.1* and *I nH.1* can be adjusted in the range (0...20mA / 0...10V) determined by selection of *SEYP*.

**!** For using the predetermined scaling with thermocouple and resistance thermometer (Pt100), the settings of *I nL.1* and *Q uL.1* as well as of *I nH.1* and *Q uH.1* must correspond.

#### 5.3.2 Input *I nP.2*

| SEYP | Input signal | <i>I nL.2</i> | <i>Q uL.2</i> | <i>I nH.2</i> | <i>Q uH.2</i> |
|------|--------------|---------------|---------------|---------------|---------------|
| 30   | 0 ... 20 mA  | 0             | -1999...9999  | 20            | -1999...9999  |
| 31   | 0 ... 50 mA  | 0             | -1999...9999  | 50            | -1999...9999  |

In addition to these settings, *I nL.2* and *I nH.2* can be adjusted in the range (0...20/ 50mA) determined by selection of *SEYP*.


## 6 Calibration level

**i** Measured value correction (CAL) is visible only if CONF / INP.1 / CORR = 1 or 2 is selected.

- To access the calibration level, press the key  $\square$  for 3 seconds and then the key  $\nabla$   $\leftarrow \updownarrow$  select the CAL -Menu item. Press  $\square$  to confirm.
- If the password function is activated, a prompt for the PASS is displayed.



In the calibration menu (CAL), the measured value can be adapted. Two methods are available :

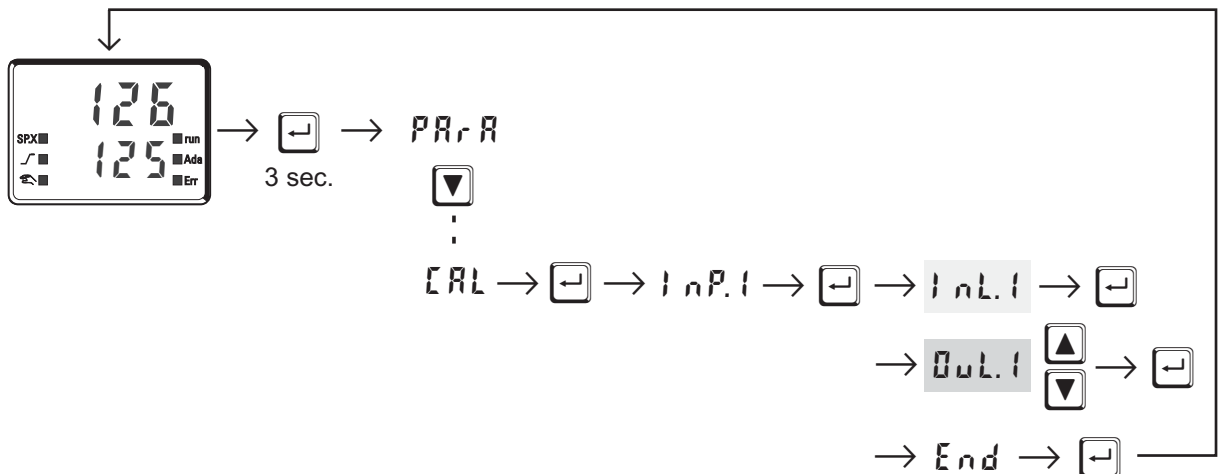

**Offset correction (CONF / INP.1 / CORR = 1):**

**INL.1:** The input value of the scaling point is displayed.

The operator must wait, until the process is at rest.


Subsequently, the operator acknowledges the input value by pressing key  $\square$ .

**OVL.1:** The display value of the scaling point is displayed.


Before calibration, OVL.1 is equal to INL.1. The operator can correct the display value by pressing keys  $\blacktriangle$   $\blacktriangledown$ .



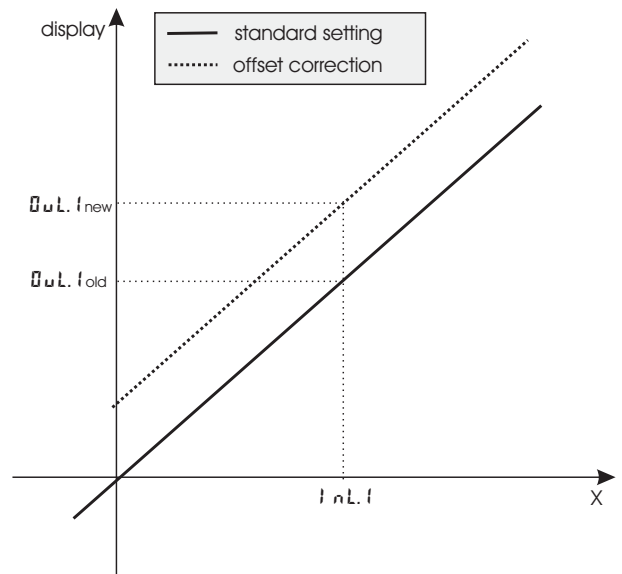

Subsequently, he confirms the display value by pressing key  $\square$ .

Offset correction ( $\text{CONF} / \text{INP.1} / \text{CORR} = 1$ ):  
possible on-line at the process

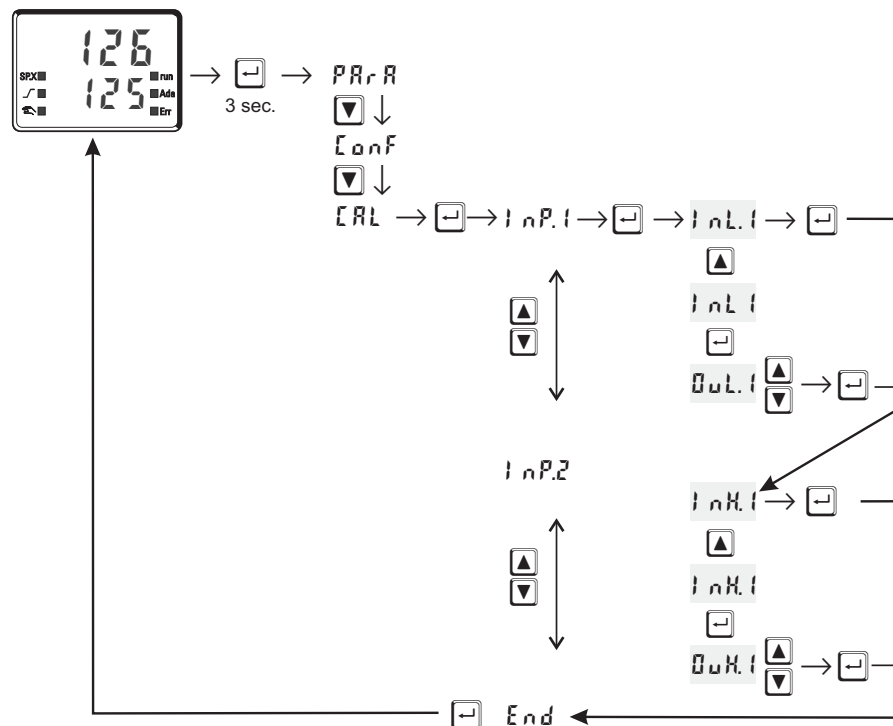

2-point correction ( $\text{CONF} / \text{INP.1} / \text{CORR} = 2$ ):




- InL.1:** The input value of the lower scaling point is displayed.  
The operator must adjust the lower input value by means of a process value simulator and confirm the input value by pressing key .
- OutL.1:** The display value of the lower scaling point is displayed.  
Before calibration, **OutL.1** is equal to **InL.1**.  
The operator can correct the lower display value by pressing the  keys. Subsequently, he confirms the display value by pressing key .


- Input:** The input value of the upper scaling point is displayed. .  
The operator must adjust the upper input value by means of the process value simulator and confirm the input value by pressing key .
- Output:** The display value of the upper scaling point is displayed.  
Before calibration **Output** is equal to **Input**.  
The operator can correct the upper display value by pressing keys   
Subsequently, he confirms the display value by pressing key .

**2-point correction** ( $CONF / Input / Corr = 2$ ):  
is possible off-line with process value simulator

**i** The parameters (**UL**, **UH**) altered at **CAL** level can be reset by decreasing them below the lowest adjustment value (**FF**) using the decrement key .

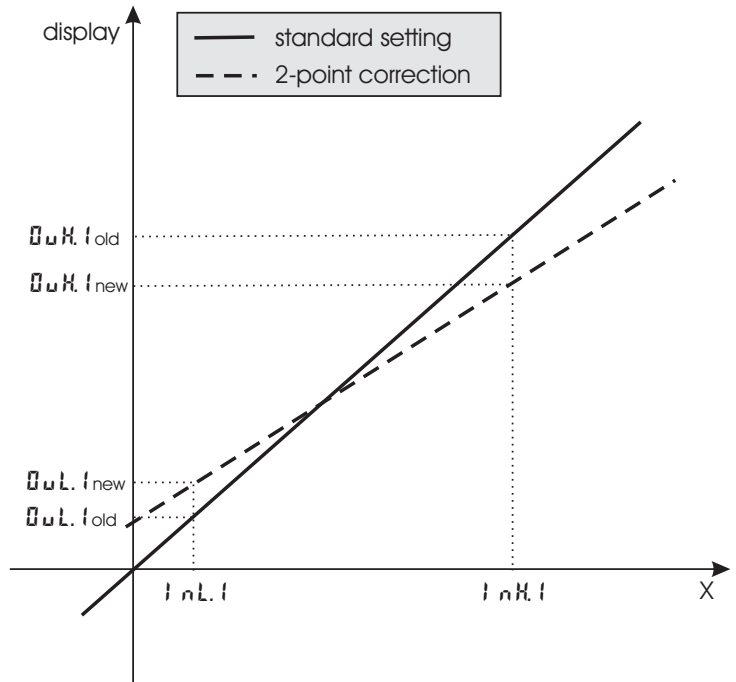

7 Programmer

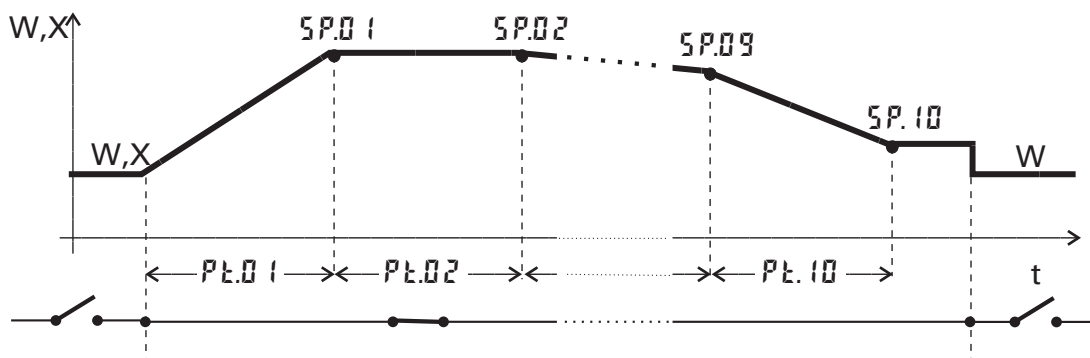

**Programmer set-up:**

For using the controller as a programmer, select parameter  $Enter / SP.Fn = 1$  in the  $CONF$  menu. The programmer is started via one of digital inputs di1..3 or the  $[F]$  key. Which input shall be used for starting the programmer is determined by selecting parameter  $LOG1 / Prun = 2 / 3 / 4 / 5$  in the  $CONF$  menu accordingly. For assigning the program end as a digital signal to one of the relay outputs, parameter  $PEnd = 1$  must be selected for the relevant output  $OUT.1...OUT.3$  in the  $CONF$  menu.

**Programmer parameter setting:**

A programmer with 4 segments is available to the user. Determine a segment duration  $Pt.01 .. Pt.04$  (in minutes) and a segment target set-point  $SP.01 .. SP.04$  for each segment in the  $PRR$  menu.

**Starting/stopping the programmer:**

Starting the programmer is done by a digital signal at input di1..3 or the  $[F]$  key selected by parameter  $Prun$ . The programmer calculates a gradient from segment end setpoint and segment time.

This gradient is always valid. Normally, the programmer starts the first segment at process value. Because of this the effective run-time of the first segment may differ from the at  $PRR$  level setted segment time (process value - setpoint). After program end, the controller continues controlling with the target set-point set last. If the program is stopped during execution (signal at digital input di1..3 or the  $[F]$  key is taken away), the programmer returns to program start and waits for a new start signal.



**Program parameter changing while the program is running is possible.**

**Changing the segment time:**


Changing the segment time leads to re-calculation of the required gradient. When the segment time has already elapsed, starting with the new segment is done directly, where the set-point changes stepwisely.

**Changing the segment end setpoint:**

Changing the set-point leads to re-calculation of the required gradient, in order to reach the new set-point during the segment rest time, whereby the required gradient polarity sign can change.

**8** Special functions

**8.1** Start-up circuit

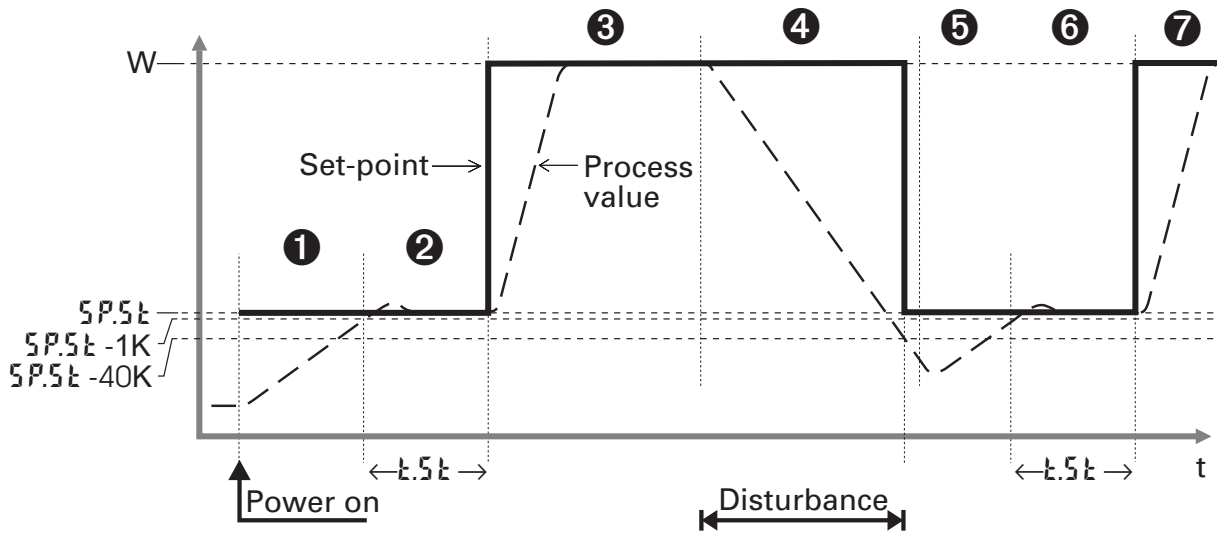

The start-up circuit is a special function for temperature control, e.g. hot runner control. High-performance heating cartridges with magnesium oxide insulation material must be heated slowly to remove moisture and prevent destruction.

**Operating principle:**

- ① After switching on the supply voltage, line-out to the start-up set-point  $SP.5t$  is using a maximum start-up correcting value of  $4.5t$ .
- ② The start-up holding time  $1.5t$  is started one K below the start-up set-point ( $SP.5t - 1K$ ).
- ③ Subsequently, the process is lined out to set-point  $W$ .
- ④ If the process value drops by more than 40 K below the start-up set-point ( $SP.5t - 40K$ ) due to a disturbance, the start-up procedure is re-started ( ⑤, ⑥, ⑦ ).

- ⓘ With  $W < SP.5t$ ,  $W$  is used as set-point. The start-up holding time  $1.5t$  is omitted.
- ⓘ If the gradient function ( $PARA/SEEP/r.SP OFF$ ) was selected, start-up value  $SP.5t$  is reached with the adjusted gradient  $r.SP$ .
- ⓘ With the boost function (see chapter 8.2) selected,  $W$  is increased by  $SP.bo$  during time  $t.bo$ .

The following settings can be selected:

$SP.Fn = 10$  set-point + start-up circuit


The start-up circuit is effective only with the internal set-point.

$SP.Fn = 11$  set-point,  $SP.E/SP.2$  + start-up circuit

The start-up circuit is effective also with the external set-point  $SP.E$  and the 2nd set-point  $SP.2$ .



## 8.2 Boost function

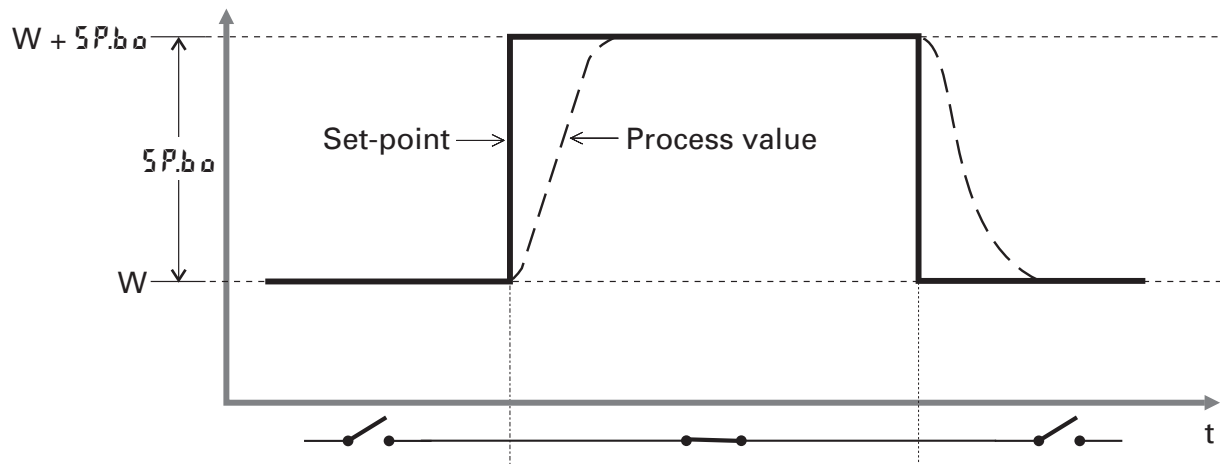

The boost function causes short-time increase of the set-point, e.g. for removing "frozen" material rests from clogged die nozzles with hot-runner control.

If configured ( `CONF/LOG1/boos` ), the boost function can be started via digital input di1/2/3, with the function key on the instrument front panel or via the interface (OPTION).

The set-point increase around boost set-point `PARA/SETP/SP.bo` remains effective as long as digital signal (di1/2/3, function key, interface) remains set. The maximum permissible cycle time (boost time-out) is determined by parameter `PARA/SETP/t.bo`.

Unless reset after elapse of boost time `t.bo`, the boost function is finished by the controller.



The boost function also works with

- start-up circuit: `PARA/SETP/SP.bo` is added to `W` after elapse of start-up holding time `PARA/SETP/t.st`.
- Gradient function: set-point `W` is increased by `PARA/SETP/SP.bo` with gradient `PARA/SETP/r.SP`.

## 8.3 KS50/52-1 as Modbus master



This function is only selectable with **BlueControl** (engineering tool)!

**Additions *oEt hr*** (only visible with BlueControl!)

| Name | Value range | Description  | Default |
|------|-------------|--|---------|
| MASt |             | <b>Controller is used as Modbus master</b>   | 0       |
|      | 0           | Slave  |         |
|      | 1           | Master   |         |
| Cycl | 0...200     | Cycle time [ms] for the Modbus master to transmit its data to the bus.               | 60      |
| AdrO | 1...65535   | Target address to which the with <b>AdrU</b> specified data is given out on the bus. | 1       |
| AdrU | 1...65535   | Modbus address of the data that Modbus master gives to the bus.                      | 1       |
| Numb | 0...100     | Number of data that should be transmitted by the Modbus master.                      | 0       |

The controller can be used as Modbus master (**CONF / oEt hr / MASt = 1**). The Modbus master sends its data to all slaves (broadcast message, controller address 0). It transmits its data (modbus address **AdrU**) cyclic with the cycle time **Cycl** to the bus. The slave controller receives the data transmitted by the masters and allocates it to the modbus target address **AdrO**.

If more than one data should be transmitted by the master controller (**Numb > 1**), the modbus address **AdrU** indicates the start address of the data that should be transmitted and **AdrO** indicates the first target address where the received data should be stored. The following data will be stored at the logically following modbus target addresses.

With this it is possible e.g. to specify the process value of the master controller as set-point for the slave controllers.

## 8.4 Linearization

Linearization for input INP1

Access to table “L n” is always with selection of sensor type S.TYP = 18: special thermocouple in INP1, or with selection of linearization S.L n 1: special linearization.

Dependent of input type, the input signals are specified in  $\mu\text{V}$  or in Ohm dependent of input type.

With up to 16 segment points, non-linear signals can be simulated or linearized. Every segment point comprises an input ( $I n.1 \dots I n.16$ ) and an output ( $O u.1 \dots O u.16$ ). These segment points are interconnected automatically by means of straight lines.


The straight line between the first two segments is extended downwards and the straight line between the two largest segments is extended upwards.

I.e. a defined output value is also provided for each input value.

When switching an  $I n.x$  value to  $OFF$ , all other ones are switched off.

Condition for these configuration parameters is an ascending order.

$I n.1 < I n.2 < \dots < I n.16$  and  $O u.1 < O u.2 \dots < O u.16$ .

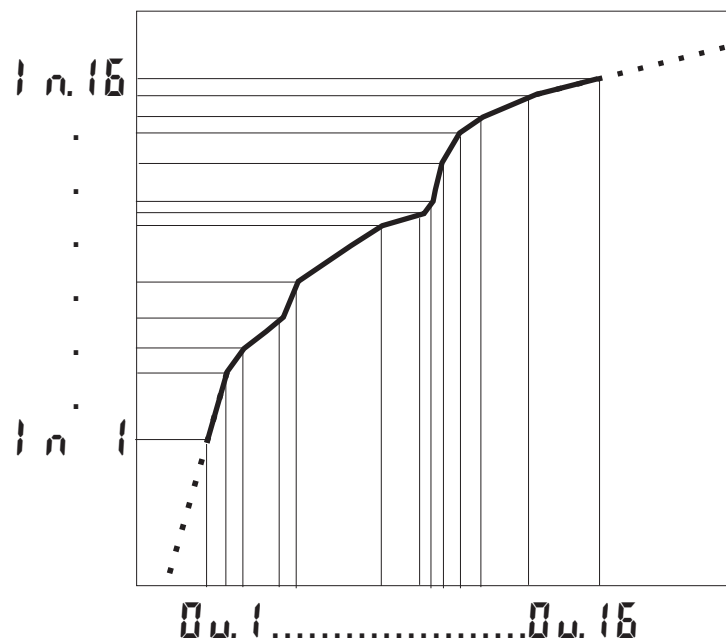

9 BlueControl

BlueControl® is the projecting environment for the PMA BluePort controller series. The following 3 licences with graded functionality are available:


| Funktionalität  | Mini    | Basic | Expert |
|---|---------|-------|--------|
| Einstellung der Parameter und Konfigurationsparameter | ja      | ja    | ja     |
| Regler und Regelstreckensimulation                    | ja      | ja    | ja     |
| Download: Übertragen eines Engineerings zum Regler    | ja      | ja    | ja     |
| Online-Modus / Visualisierung                         | nur SIM | ja    | ja     |
| Erstellen einer anwenderspezifischen Linerarisierung  | ja      | ja    | ja     |
| Konfiguration der erweiterten Bedienebene             | ja      | ja    | ja     |
| Upload: Lesen eines Engineerings vom Regler           | nur SIM | ja    | ja     |
| Basisdiagnosefunktion                                 | nein    | nein  | ja     |
| Datei, Engineering speichern                          | nein    | ja    | ja     |
| Druckenfunktion                                       | nein    | ja    | ja     |
| Onlinedokumentation / Hilfe                           | ja      | ja    | ja     |
| Durchführen der Meßwertkorrektur                      | ja      | ja    | ja     |
| Datenerfassung und Trendaufzeichnung                  | nur SIM | ja    | ja     |
| Assistentenfunktion                                   | ja      | ja    | ja     |
| erweiterte Simulation                                 | nein    | nein  | ja     |
| Programmeditor (nur KS 90-1prog)                      | nein    | nein  | ja     |

**Die "Universal BlueControl"® Software verfügt über alle hier aufgeführten Funktionen der Expert-Version. Sämtliche BluePort Geräte können darüber angesprochen werden.**

The mini version is - free of charge - at your disposal as download at PMA homepage [www.pma-online.de](http://www.pma-online.de) or on the PMA-CD (please ask for).

At the end of the installation the licence number has to be stated or DEMO mode must be chosen.

At DEMO mode the licence number can be stated subsequently under **Help → Licence → Change**.

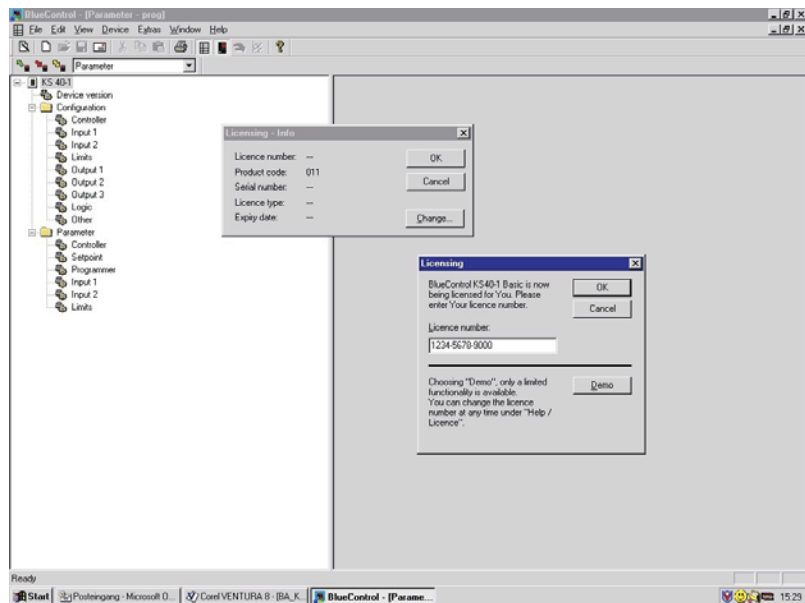

**10** Versions

|   | K | S | 5 | - | 1 | - | 0 | 0 | - |   |    |
|---|---|---|---|---|---|---|---|---|---|---|----|
| KS 50-1 Format 48 x 96                        |   |   | 0 |   | ↑ |   |   |   |   | ↑ |    |
| KS 52-1 Format 96 x 96                        |   |   | 2 |   | ↑ |   |   |   |   | ↑ |    |
| Flat pin connector                            |   |   |   |   | 0 |   |   |   |   |   |    |
| Screw terminals                               |   |   |   |   | 1 |   |   |   |   |   |    |
| 90..250V AC, INP2, 3 relays                   |   |   |   |   |   |   | 0 |   |   |   |    |
| 24VAC / 18..30VDC, INP2, 3 relays             |   |   |   |   |   |   | 1 |   |   |   |    |
| 90..250V AC, INP2, 2 relays+ mA/V/logic       |   |   |   |   |   |   | 2 |   |   |   |    |
| 24VAC / 18..30VDC, INP2, 2 relays+ mA/V/logic |   |   |   |   |   |   | 3 |   |   |   |    |
| 90..250VAC, 2 relays (Wechsler) + mA/V/logic  |   |   |   |   |   |   | 4 |   |   |   |    |
| No option                                     |   |   |   |   |   |   |   | 0 |   |   |    |
| Modbus RTU + U <sub>T</sub> + di2/3 + OUT5/6  |   |   |   |   |   |   |   | 1 |   |   |    |
| U <sub>T</sub> + di2/3 + OUT5/6               |   |   |   |   |   |   |   | 8 |   |   |    |
| Standard configuration                        |   |   |   |   |   |   |   |   | 0 |   |    |
| Configuration to specification                |   |   |   |   |   |   |   |   | 9 |   |    |
| No manual                                     |   |   |   |   |   |   |   |   |   | 0 |    |
| Manual german                                 |   |   |   |   |   |   |   |   |   | D |    |
| Manual english                                |   |   |   |   |   |   |   |   |   | E |    |
| Manual french                                 |   |   |   |   |   |   |   |   |   | F |    |
| Manual russian                                |   |   |   |   |   |   |   |   |   | R |    |
| Standard                                      |   |   |   |   |   |   |   |   |   |   | 0  |
| cULus-certified (with screw terminals only)   |   |   |   |   |   |   |   |   |   |   | U  |
| DIN EN 14597 certified (replaces DIN 3440)    |   |   |   |   |   |   |   |   |   |   | D  |
| GOST-R certified (incl. russ. manual)         |   |   |   |   |   |   |   |   |   |   | R  |
| Standard version                              |   |   |   |   |   |   |   |   |   |   | 00 |
| Customer specification                        |   |   |   |   |   |   |   |   |   |   | .. |

**Accessories delivered with the instrument**

Operating manual (if selected using the ordering code)

- 2 fixing clamps
- operating note in 15 languages

### Accessory equipment with ordering information

| <u>Description</u>                               |           |          | <u>Order no.</u>   |
|--|-----------|----------|--|
| Heating current transformer 50A AC               |           |          | 9404-407-50001   |
| PC-adaptor for the front-panel interface (RS232) |           |          | 9407-998-00001   |
| Standard rail adaptor                            |           |          | 9407-998-00061   |
| Operating manual                                 | German    |          | 9499-040-62818   |
| Operating manual                                 | English   |          | 9499-040-62811   |
| Operating manual                                 | French    |          | 9499-040-62832   |
| Operating manual                                 | Russian   |          | 9499-040-62865   |
| Interface description Modbus RTU                 | German    |          | 9499-040-63618   |
| Interface description Modbus RTU                 | English   |          | 9499-040-63611   |
| BlueControl (engineering tool)                   | Mini      | Download | <a href="http://www.pma-online.de">www.pma-online.de</a> |
| BlueControl (engineering tool)                   | Basic     |          | 9407-999-11001   |
| BlueControl (engineering tool)                   | Expert    |          | 9407-999-11011   |
| BlueControl (engineering tool)                   | Universal |          | 9407-999-19011   |

## 11 Technical data

### INPUTS

#### PROCESS VALUE INPUT INP1

Resolution: > 14 bits  
 Decimal point: 0 to 3 digits behind the decimal point  
 Dig. input filter: adjustable 0,000...9999 s  
 Scanning cycle: 100 ms  
 Measured value correction: 2-point or offset correction

#### Thermocouples

→ Table 1 (page 65)

Input resistance:  $\geq 1 \text{ M}\Omega$   
 Effect of source resistance: 1 V/

#### Cold-junction compensation

Maximal additional error: 0,5 K

#### Sensor break monitoring

Sensor current:  $\leq 1 \mu\text{A}$   
 Configurable output action

#### Resistance thermometer

→ Table 2 (page 65)

Connection: 2 or 3-wire  
 Lead resistance: max. 30 Ohm  
 Input circuit monitor: break and short circuit

#### Special measuring range

BlueControl (engineering tool) can be used to match the input to sensor KTY 11-6 (characteristic is stored in the controller).

Physical measuring range: 0...4500 Ohm  
 Linearization segments 16

#### Current and voltage signals

→ Table 3 (page 65)

Span start, end of span: anywhere within measuring range  
 Scaling: selectable -1999...9999  
 Linearization: 16 segments, adaptable with BlueControl  
 Decimal point: adjustable  
 Input circuit monitor: 12,5% below span start (2mA, 1V)

#### SUPPLEMENTARY INPUT INP2

Resolution: > 14 bits  
 Scanning cycle: 100 ms  
 Accuracy: < 0,5 %

#### Heating current measurement

via current transformer ( Accessory equipment)

Measuring range: 0...50mA AC  
 Scaling: adjustable -1999...0,000...9999 A

#### Current measuring range

Technical data as for INP1

#### CONTROL INPUT DI1

Configurable as switch or push-button (the adjustment is possible only in common for all digital inputs)!  
 Connection of a potential-free contact suitable for switching "dry" circuits.

Switched voltage: 2,5 V  
 Switched current: 50  $\mu\text{A}$

#### CONTROL INPUTS DI2, DI3 (OPTION)

Configurable as switch or push-button!  
 (the adjustment is possible only in common for all digital inputs)!

Contact-input (KS5\_-1\_\_-800\_\_-\_\_)

Connection of a potential-free contact suitable for switching "dry" circuits.

Switched voltage: 5 V  
 Switched current: 160  $\mu\text{A}$

Optocoupler input(KS5\_-1\_\_-100\_\_-\_\_)

Optocoupler input for active triggering

Nominal voltage 24 V DC external  
 Current sink (IEC 1131 type 1)  
 Logic "0" -3...5 V  
 Logic "1" 15...30 V  
 Current requirement approx.. 5 mA

#### TRANSMITTER SUPPLY $U_T$ (OPTION)

Power: 22 mA /  $\geq 18 \text{ V}$

If the universal output OUT3 is used there may be no external galvanic connection between measuring and output circuits!

#### GALVANIC ISOLATION

— Safety isolation  
 = Function isolation

|                       |   |
|-----------------------|---|
| Mains supply          | Process value input INP1<br>Supplementary input INP2<br>Digital input di1 |
| Relay outputs OUT 1,2 | RS422/485 interface   |
| Relay output OUT3     | Digital inputs di2, 3   |
|                       | Universal output OUT3   |
|                       | Transmitter supply $U_T$  |
|                       | OUT5, OUT6  |

## OUTPUTS

### RELAY OUTPUTS OUT1, OUT2

|                           |   |
|---------------------------|---|
| Contact type:             | KS5_-1_0_00_-_-_-_-                             |
|                           | KS5_-1_1_00_-_-_-_-                             |
|                           | KS5_-1_2_00_-_-_-_-                             |
|                           | KS5_-1_3_00_-_-_-_-                             |
|                           | 2 NO contacts with common connection            |
|                           | KS5_-1_4_00_-_-_-_-                             |
|                           | KS5_-1_5_00_-_-_-_-                             |
|                           | 2 potentialfree change-over contacts            |
| Max. contact rating:      | 500 VA, 250 V, 2A at 48...62 Hz, resistive load |
| Min. contact rating:      | 6V, 1 mA DC                                     |
| Operating life (electr.): | 800.000 duty cycles with max. rating            |

### OUT3 USED AS RELAY OUTPUT

|                           |   |
|---------------------------|---|
| Contact type:             | potential-free changeover contact               |
| Max. contact rating:      | 500 VA, 250 V, 2A at 48...62 Hz, resistive load |
| Min. contact rating:      | 5V, 10 mA AC/DC                                 |
| Operating life (electr.): | 600.000 duty cycles with max. contact rating    |

#### Note:

If the relays OUT1...OUT3 operate external contactors, these must be fitted with RC snubber circuits to manufacturer specifications to prevent excessive switch-off voltage peaks.

### OUT3 AS UNIVERSAL OUTPUT

Galvanically isolated from the inputs.

Freely scalable resolution: 11bits

#### Current output

0/4...20 mA configurable.

|               |                 |
|---------------|-----------------|
| Signal range: | 0...approx.22mA |
| Max. load:    | ≤ 500 Ω         |
| Load effect:  | no effect       |
| Resolution:   | ≤ 22 μA (0,1%)  |
| Accuracy      | ≤ 40 μA (0,2%)  |

#### Voltage output

0/2...10V configurable

|               |                |
|---------------|----------------|
| Signal range: | 0...11 V       |
| Min. load:    | 2 kΩ           |
| Load effect:  | no effect      |
| Resolution:   | ≤ 11 mV (0,1%) |
| Accuracy      | ≤ 20 mV (0,2%) |

### OUT3 used as transmitter supply

Output power: 22 mA / ≥13 V

### OUT3 used as logic output

|            |          |
|------------|----------|
| Load 500   | 0/≤20 mA |
| Load > 500 | 0/> 13 V |

### OUTPUTS OUT5, OUT6 (OPTION)

Galvanically isolated opto-coupler outputs.  
Grounded load: common positive voltage.  
Output rating: 18...32 VDC; 70 mA  
Internal voltage drop: 1V with I<sub>max</sub>. Protective circuit: built-in against short circuit, overload, reversed polarity (free-wheel diode for relay loads).

## POWER SUPPLY

Dependent of order:

### AC SUPPLY

|                   |                |
|-------------------|----------------|
| Voltage:          | 90...260 V AC  |
| Frequency:        | 48...62 Hz     |
| Power consumption | approx. 7,0 VA |

### UNIVERSAL SUPPLY 24 V UC

|                    |                  |
|--------------------|------------------|
| AC voltage:        | 20,4...26,4 V AC |
| Frequency:         | 48...62 Hz       |
| DC voltage:        | 18...31 V DC     |
| Power consumption: | approx.. 7,0 VA  |

### BEHAVIOUR WITH POWER FAILURE

*Configuration, parameters and adjusted set-points, control mode: Non-volatile storage in EEPROM*

## BLUEPORT FRONT INTERFACE

Connection of PC via PC adapter (see "Accessory equipment"). The BlueControl software is used to configure, set parameters and operate the controller.

## BUS INTERFACE (OPTION)

Galvanically isolated

|   |                                   |
|---|-----------------------------------|
| Physical:   | RS 422/485                        |
| Protocol:   | Modbus RTU                        |
| Transmission speed:   | 2400, 4800, 9600, 19.200 bits/sec |
| Address range:  | 1...247                           |
| Number of controllers per bus:                                    | 32                                |
| Repeaters must be used to connect a higher number of controllers. |                                   |

## ENVIRONMENTAL CONDITIONS

### Protection modes

|              |                 |
|--------------|-----------------|
| Front panel: | IP 65 (NEMA 4X) |
| Housing:     | IP 20           |
| Terminals:   | IP 00           |

### Permissible temperatures

|                         |            |
|-------------------------|------------|
| For specified accuracy: | 0...60°C   |
| Warm-up time:           | 15 minutes |
| For operation:          | -20...65°C |
| For storage:            | -40...70°C |

### Humidity

max. 95% rel. humidity  
75% yearly average, no condensation



## Shock and vibration

### Vibration test Fc (DIN 68-2-6)

Frequency: 10...150 Hz  
 Unit in operation: 1g or 0,075 mm  
 Unit not in operation: 2g or 0,15 mm

### Shock test Ea (DIN IEC 68-2-27)

Shock: 15g  
 Duration: 11ms

## Electromagnetic compatibility

Complies with EN 61 326-1  
 (for continuous, non-attended operation)

## GENERAL

### Housing

Material: Makrolon 9415 flame-retardant  
 Flammability class: UL 94 VO, self-extinguishing

Plug-in module, inserted from the front

### Safety test

Complies with EN 61010-1 (VDE 0411-1):  
 Overvoltage category II, Contamination class 2  
 Working voltage range 300 V, Protection class II

## Certifications

### Type tested to EN 14597 (replaces DIN 3440)

With certified sensors applicable for:

- Heat generating plants with outflow temperatures up to 120°C to DIN 4751
- Hot-water plants with outflow temperatures above 110°C to DIN 4752
- Thermal transfer plants with organic transfer media to DIN 4754
- Oil-heated plants to DIN 4755

### cULus-certification

(Type 1, indoor use)  
 File: E 208286

### GOST-R Certificate(on request):

For each shipment to the russian federation and GUS-states, an authenticated certificate is to be delivered with the GOST-R certificated controllers (KS4\_-1, KS5\_-1, KS9\_-1, one certificate per shipment - 9499-047-14465).

### Mounting

Panel mounting with two fixing clamps at top/bottom or right/left,  
 High-density mounting possible

Mounting position: uncritical  
 Weight: 0,27kg

### Accessories delivered with the unit

Operating manual (if selected in the order code)  
 Fixing clamps  
 operating hint (12 languages)

Table 1 Thermocouple measuring ranges

| Thermocouple type |                | Range         |               | Accuracy | Resolution (∅) |
|-------------------|----------------|---------------|---------------|----------|----------------|
| L                 | Fe-CuNi (DIN)  | -100...900°C  | -148...1652°F | ≤ 2K     | 0,1 K          |
| J                 | Fe-CuNi        | -100...1200°C | -148...2192°F | ≤ 2K     | 0,1 K          |
| K                 | NiCr-Ni        | -100...1350°C | -148...2462°F | ≤ 2K     | 0,2 K          |
| N                 | Nicrosil/Nisil | -100...1300°C | -148...2372°F | ≤ 2K     | 0,2 K          |
| S                 | PtRh-Pt 10%    | 0...1760°C    | 32...3200°F   | ≤ 2K     | 0,2 K          |

Table 2 Resistance transducer measuring ranges

| Type     | Sens. current | Range        |               | Accuracy | Resolution (∅) |
|----------|---------------|--------------|---------------|----------|----------------|
| Pt100    | 0,2mA         | -200...100°C | -140...212°F  | ≤ 1K     | 0,1K           |
| Pt100    |               | -200...850°C | -140...1562°F | ≤ 1K     | 0,1K           |
| Pt1000   |               | -200...850°C | -140...392°F  | ≤ 2K     | 0,1K           |
| KTY 11-6 |               | -50...150°C  | -58...302°F   | ≤ 2K     | 0,05K          |

Table 3 Current and voltage measuring ranges

| Range     | Input resistance                 | Accuracy | Resolution (∅) |
|-----------|----------------------------------|----------|----------------|
| 0-10 Volt | ≈ 110 k                          | ≤ 0,1 %  | ≤ 0,6 mV       |
| 0-20 mA   | 49 (voltage requirement ≤ 2,5 V) | ≤ 0,1 %  | ≤ 1,5 A        |

### 12 Safety hints

This unit was built and tested in compliance with VDE 0411-1 / EN 61010-1 and was delivered in safe condition.

The unit complies with European guideline 2004/108/EG (EMC) and is provided with CE marking.

The unit was tested before delivery and has passed the tests required by the test schedule. To maintain this condition and to ensure safe operation, the user must follow the hints and warnings given in this operating manual.

The unit is intended exclusively for use as a measurement and control instrument in technical installations.



#### **Warning**

If the unit is damaged to an extent that safe operation seems impossible, the unit must not be taken into operation.

#### **ELECTRICAL CONNECTIONS**

The electrical wiring must conform to local standards (e.g. VDE 0100). The input measurement and control leads must be kept separate from signal and power supply leads.

In the installation of the controller a switch or a circuit-breaker must be used and signified. The switch or circuit-breaker must be installed near by the controller and the user must have easy access to the controller.

#### **COMMISSIONING**

Before instrument switch-on, check that the following information is taken into account:

- Ensure that the supply voltage corresponds to the specifications on the type label.
- All covers required for contact protection must be fitted.
- If the controller is connected with other units in the same signal loop, check that the equipment in the output circuit is not affected before switch-on. If necessary, suitable protective measures must be taken.
- The unit may be operated only in installed condition.
- Before and during operation, the temperature restrictions specified for controller operation must be met.

#### **SHUT-DOWN**

For taking the unit out of operation, disconnect it from all voltage sources and protect it against accidental operation.

If the controller is connected with other equipment in the same signal loop, check that other equipment in the output circuit is not affected before switch-off. If necessary, suitable protective measures must be taken.

**MAINTENANCE, REPAIR AND MODIFICATION**

The units do not need particular maintenance.

**Warning**

When opening the units, or when removing covers or components, live parts and terminals may be exposed.

**Before starting this work, the unit must be disconnected completely.**

After completing this work, re-shut the unit and re-fit all covers and components. Check if specifications on the type label must be changed and correct them, if necessary.

**Caution**

When opening the units, components which are sensitive to electrostatic discharge (ESD) can be exposed. The following work may be done only at workstations with suitable ESD protection.

Modification, maintenance and repair work may be done only by trained and authorized personnel. For this purpose, the PMA service should be contacted.







The cleaning of the front of the controller should be done with a dry or a wetted (spirit, water) kerchief.

## 12.1 Reset to default







In the event of faulty configuration, the instrument can be reset to default.

In the event of faulty configuration, the instrument can be reset to default.

- 1 To start resetting, the operator must hold down the increment and the decrement key   **simultaneously** when switching on the supply voltage.
- 2 Subsequently, press the increment key  to select YES.
- 3 Press  to confirm reset to default and to start copying (display COPY).
- 4 Subsequently, the instrument restarts.

In all other cases, no reset is necessary (cancellation via Timeout).

-  If one of the operating levels is disabled (using BlueControl®) and the Loc safety switch is open, reset to default is not possible.
-  If a pass code was defined (using BlueControl®) and if the Loc safety switch is open without an operating level being blocked, entry of the correct pass code is prompted with text PASS after confirmation under 3. If the pass code is faulty, resetting is not executed.
-  Copying COPY may take several seconds.
-  An individual default data set can be generated using the BlueControl® Software.

# Index

## 0-9

2-point correction. . . . . 55

## A

Accessories . . . . . 62

Alarm handling . . . . . 25 - 26

## B

BlueControl. . . . . 61

Boost function . . . . . 58

Bus interface

    Technical Data. . . . . 65

## C

Calibration level (FL) . . . . . 53 - 55

Certifications . . . . . 66

Configuration examples

    2-point controller . . . . . 42 - 43

    3-point stepping controller . . . . . 44

    D - Y -Off controller. . . . . 45

    Measured value output . . . . . 46

    Signaller . . . . . 41

Configuration level

    Configuration parameters. . . . . 29 - 37

    Parameter survey . . . . . 28

Connecting diagram . . . . . 7

Connecting examples

    di2/3, 2-wire transmitter supply . . . . . 10

    INP2 current transformer . . . . . 9

    OUT1/2 heating/cooling . . . . . 9

    OUT3 as logic output . . . . . 10

    OUT3 transmitter supply . . . . . 10

    RS485 interface . . . . . 11

Control inputs di1, di2, di3

    Technical data . . . . . 64

Cooling functions

    Constant period . . . . . 40

    Standard . . . . . 38

    Water cooling linear. . . . . 39

    Water cooling non-linear . . . . . 39

Current signal measuring range . . . . . 64

## D

Digital inputs di1, di2, di3

    Configuration . . . . . 34

    Technical data . . . . . 64

## E

Environmental conditions . . . . . 65

Equipment . . . . . 63

Error list . . . . . 14

Error status . . . . . 15

## F

F - key . . . . . 12

Front view . . . . . 12

## I

Input INP1

    Configuration . . . . . 30

    Parameters . . . . . 51

    Technical data . . . . . 64

Input INP2

    Configuration . . . . . 31

    Parameters . . . . . 51

    Technical data . . . . . 64

Input scaling . . . . . 52

## L

LED

    Ada - LED . . . . . 12

    Err - LED . . . . . 12

    J - LED . . . . . 12

    LED colours . . . . . 12

    M - LED. . . . . 12

    run - LED . . . . . 12

    SP.x - LED. . . . . 12

Linearization . . . . . 60

## M

Maintenance manager . . . . . 14 - 15


Manual tuning . . . . . 23

Modbus master . . . . . 59

Mounting . . . . . 5 - 6

|  |         |  |         |
|--|---------|--|---------|
| <b>O</b>   |         |  |         |
| Offset correction . . . . .                      | 54      | Set-point processing . . . . .           | 38      |
| Optimization at the setpoint . . . . .           | 19      | Start-up circuit . . . . .               | 57      |
| Output OUT1                                      |         | <b>T</b>                                 |         |
| Configuration . . . . .                          | 32      | Thermocouple measuring range . . . . .   | 64      |
| Technical data . . . . .                         | 65      | <b>V</b>                                 |         |
| Output OUT2                                      |         | Versions . . . . .                       | 62 - 63 |
| Configuration . . . . .                          | 32      | Voltage signal measuring range . . . . . | 64      |
| Technical data . . . . .                         | 65      |  |         |
| Output OUT3                                      |         |  |         |
| Configuration . . . . .                          | 32      |  |         |
| Technical data . . . . .                         | 65      |  |         |
| Output OUT5                                      |         |  |         |
| Configuration . . . . .                          | 33      |  |         |
| Technical data . . . . .                         | 65      |  |         |
| Output OUT6                                      |         |  |         |
| Configuration . . . . .                          | 33      |  |         |
| Technical data . . . . .                         | 65      |  |         |
| <b>P</b>   |         |  |         |
| Parameter setting level                          |         |  |         |
| Parameter survey . . . . .                       | 48      |  |         |
| Parameters . . . . .                             | 49 - 51 |  |         |
| Power supply . . . . .                           | 65      |  |         |
| Programmer                                       |         |  |         |
| Changing segment end setpoint . . . . .          | 56      |  |         |
| Changing segment time . . . . .                  | 56      |  |         |
| Parameter setting . . . . .                      | 56      |  |         |
| Set-up . . . . .                                 | 56      |  |         |
| Starting/Stopping . . . . .                      | 56      |  |         |
| <b>R</b>   |         |  |         |
| Reset to default . . . . .                       | 69      |  |         |
| Resistance thermometer measuring range . . . . . | 64      |  |         |
| <b>S</b>   |         |  |         |
| Safety hints . . . . .                           | 67 - 69 |  |         |
| Safety switch. . . . .                           | 5       |  |         |
| Safety test. . . . .                             | 66      |  |         |
| Self tuning                                      |         |  |         |
| Cancellation . . . . .                           | 17      |  |         |
| Causes of cancellation. . . . .                  | 17      |  |         |
| Self-tuning cancellation . . . . .               | 17      |  |         |



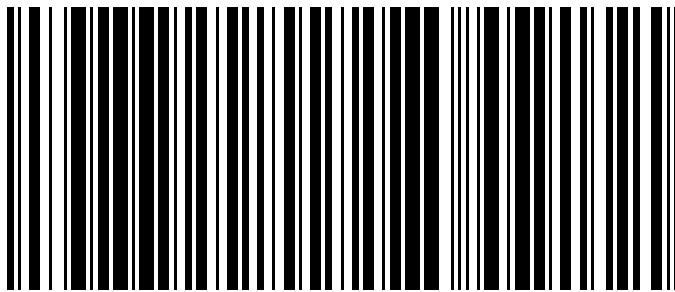

9499-040-62811

Subject to alterations without notice  
Änderungen vorbehalten  
Sous réserve de toutes modifications

© PMA Prozeß- und Maschinen-Automation GmbH  
P.O.B. 310 229, D-34058 Kassel, Germany  
Printed in Germany 9499-040-62811 (06/2009)

A6

A5 auf A6 gefaltet, 2-fach geheftet, SW-Druck Normalpapier weiß 80g/m<sup>2</sup>